



Kubota

SUBJECT :
FUEL LEAKING FROM THE FUEL SUB
TANK

Bulletin No :
 CM-22-064-02-KEEN
 Date : Jan. 08, 2024
 Ref.PB No :

Marco Carugati

Kubota Europe S.A.S

MODEL : KX060-5, U56-5, AND U50-5

AFFECTED SERIAL NUMBER : Refer to the attached list.

AFFECTED COUNTRY : KE, KUK, AND KBD

REASON FOR ISSUE :

Cases are reported that fuel is leaking from the fuel sub tank.

Investigation revealed that there was a crack on the connection of the fuel sub tank.

We herewith inform you about the measure to take in such failure case.

REASON FOR REVISION :

Change to Mandatory Campaign. Added affected serial number list.

Machines that have already been modified to improved parts are not affected by this bulletin.

PARTS INFORMATION :

No.	Parts No.	Parts Name	Q'ty	Remarks
1	RD379-95200	Tank, kit (sub)	1	This kit is for KX060-5 (Fuel suction pump type)
2	RD579-95200	Tank, kit (sub)	1	This kit is for U56-5, U50-5, and KX060-5 (Non fuel suction pump type)

☒ **WARRANTY INFORMATION**

- ☒ Mandatory Campaign : Allowable Man-hours ; 1.7 hrs.
 <Importance rank and treatment completion target date>
 - ☐ M(A) : By the end of
 - ☐ M(B) : Within 1 year from the date of this service bulletin issue.
 - ☒ M(C) : Within 3 years from the date of this service bulletin issue.
- ☐ Technical Bulletin : Allowable Man-hours ;
- ☐ Quality Related Information

REPAIR PROCEDURE FOR FUEL LEAKING FROM THE FUEL SUB TANK WITH FUEL SUCTION PUMP (OPTIONAL KX060-5 ONLY)


Kit list

Tank, kit (sub): RD379-95200

Parts list


No.	Parts No.	Part Name	Q'ty	Remarks
(1)	RD579-51120	TUBE, FUEL (1)	1	
(2)	16241-73360	BAND, PIPE	2	
(3)	RD579-51160	JOINT, STR PIPE	1	
(4)	RD579-51170	TUBE, FUEL (2)	1	
(5)	14911-42750	CLIP, PIPE	1	
(6)	RD379-51610	TANK, FUEL	1	
(7)	RD579-51180	HOSE (FUEL)	1	
(8)	35820-15180	BAND	1	
(9)	RD379-51870	CUSHION (FUEL TANK)	1	

All parts dismantled during disassembly, except those in the kit, are reused.

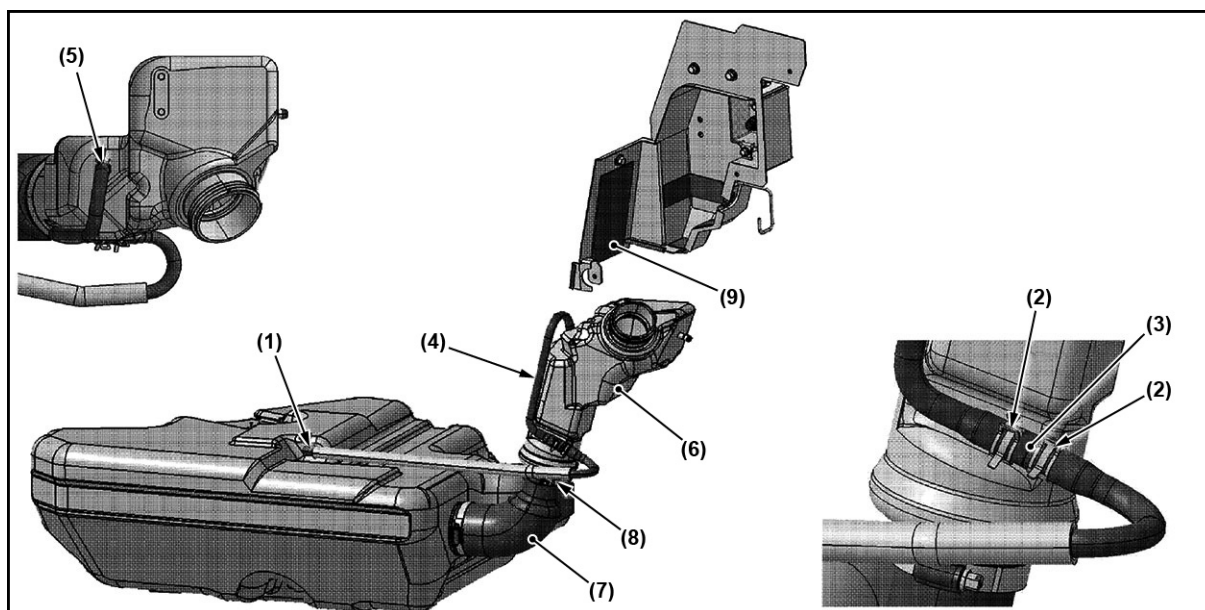

Required tools

No.	Tool Name	Remarks
(1)	10 mm spanner	
(2)	Torque wrench	Required torque: 2.0 to 12.0 N·m
(3)	Extension bar (70 mm)	
(4)	7 mm socket	
(5)	8 mm socket	
(6)	Torque wrench	Required torque: 19.0 to 27.5 N·m
(7)	Extension bar (150 mm)	
(8)	12 mm socket	
(9)	Torque wrench	Required torque: 48.1 to 55.9 N·m
(10)	14 mm socket	
(11)	Universal pliers	
(12)	Jerry can	20L x 3

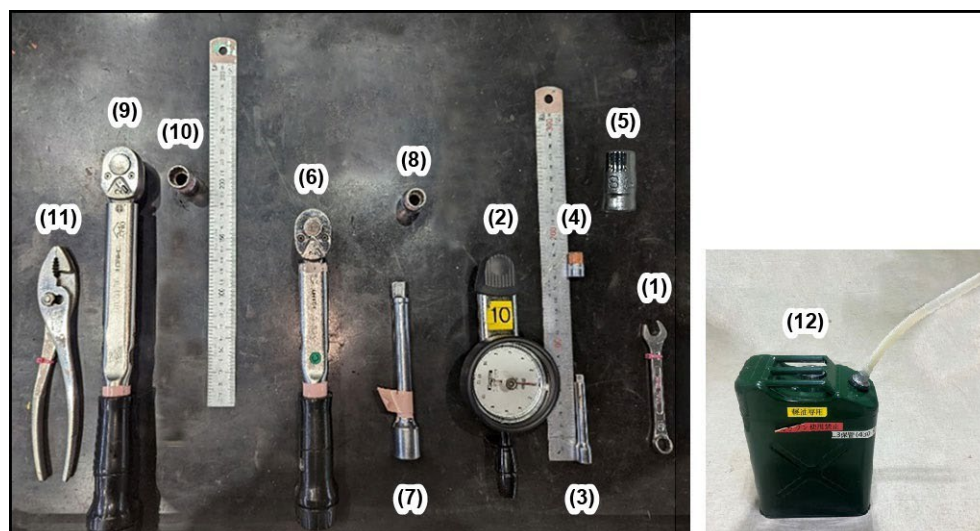Photo of tools**! WARNING**


To avoid personal injury or death:


- Park the machine on a firm and level ground.
- Lower the bucket to the ground.
- Set all controls in their neutral positions.
- Release all residual pressure of the hydraulic system.
- Stop the engine. Remove the key from the ignition.
- The engine, hydraulic components and coolants can be hot.
Wait until all the components are cooled down sufficiently to avoid burns.
- Clean the work area and the machine.
- Disconnect the battery negative cable.
- Hang a "DO NOT OPERATE" tag on the operator station.
- Put on working clothes and personal protective equipment.
- Read all instructions and safety instructions in this bulletin and safety labels on your machine.
- Follow the local safety regulations and/or laws in your country.
- If you are working with other people, make sure that your signals and communications are fully understandable for additional safety.

1. Preparation

	1. Disconnect the negative cable from the battery or use the battery isolator switch to cut off the power supply to the excavator.
	2. Place a jerrycan under the fuel drain cock. 3. Open the cover (1). (1) Cover
	4. Open the fuel drain cock (1) and drain the fuel completely. ■ NOTE ● Fuel may leak if the fuel remains in the tank. (1) Fuel drain cock

2. Removing the fuel suction pump cover

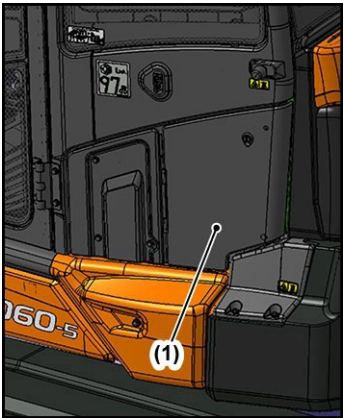	1. Open the fuel suction pump cover (1). (1) Fuel suction pump cover
---	---

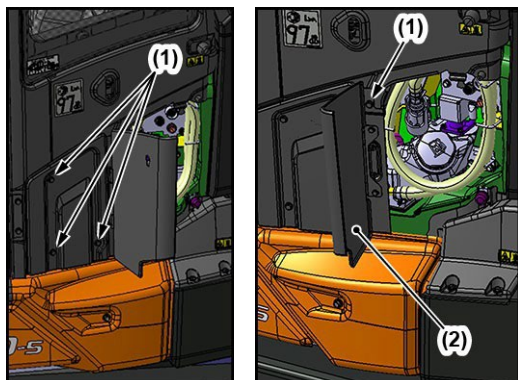


2. Remove the bolts (1).
3. Remove the fuel suction pump cover (2).

Tightening torque	Bolt (M8)	19.0 to 25.0 N·m 1.9 to 2.5 kgf·m 14.0 to 18.4 lbf·ft
-------------------	-----------	---

- (1) Bolt x 4: Reuse
- (2) Fuel suction pump cover: Reuse

3. Removing the swivel cover LH

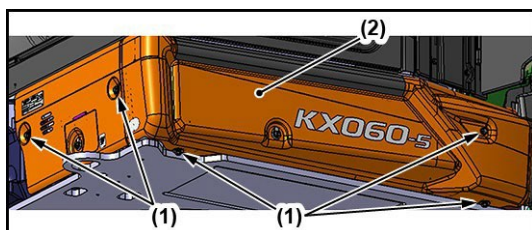


1. Remove the bolts (1).
2. Remove the swivel cover LH (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---


- (1) Bolt x 5: Reuse
- (2) Swivel cover LH: Reuse

4. Removing the panel

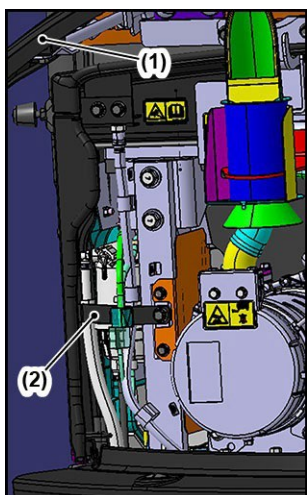

1. Open the engine bonnet (1) and remove the harness clamp (2).

- (1) Engine bonnet
- (2) Harness clamp

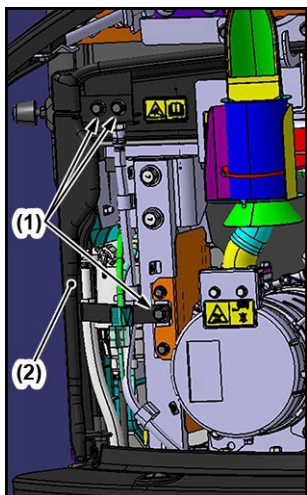


2. Remove the bolts (1).
3. Remove the panel (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Bolt x 3: Reuse
- (2) Panel: Reuse

5. Removing the weight cover

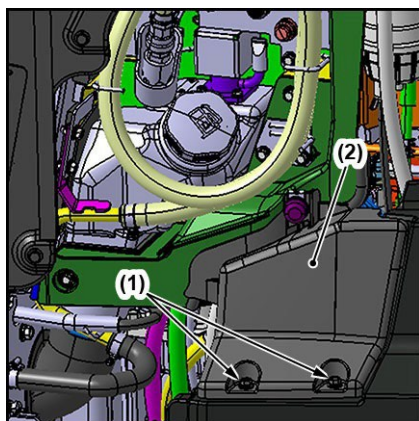


1. Remove the bolts (1).
2. Remove the weight cover (2).

Tightening torque	Bolt (M8)	23.5 to 27.5 N·m 2.40 to 2.80 kgf·m 17.3 to 20.3 lbf·ft
-------------------	-----------	---

- (1) Bolt x 2: Reuse
- (2) Weight cover: Reuse

6. Removing the cover

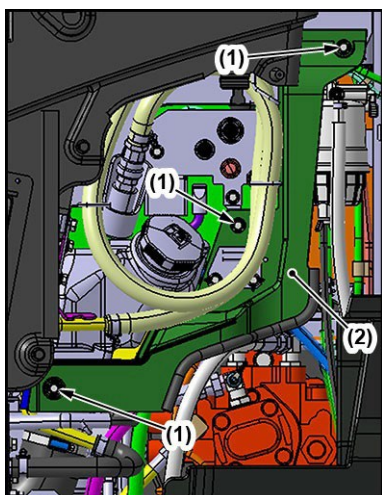


1. Remove the bolts (1).
2. Remove the cover (2).

Tightening torque	Bolt (M8)	23.5 to 27.5 N·m 2.40 to 2.80 kgf·m 17.3 to 20.3 lbf·ft
-------------------	-----------	---

- (1) Bolt x 3: Reuse
- (2) Cover: Reuse

7. Removing the fuel hose

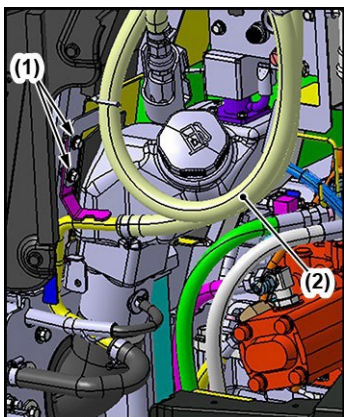


1. Remove the bolts (1).
2. Remove the fuel hose (2).

Tightening torque	Bolt (M8)	23.5 to 27.5 N·m 2.40 to 2.80 kgf·m 17.3 to 20.3 lbf·ft
-------------------	-----------	---


- (1) Bolt x 2: Reuse
(2) Fuel hose: Reuse

8. Removing the plate

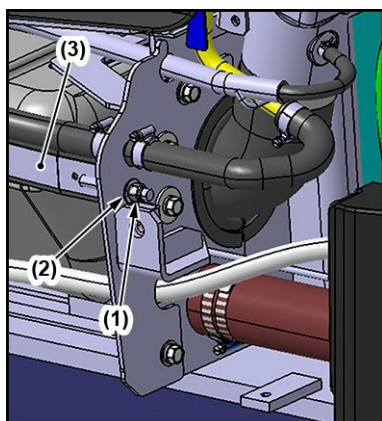

1. Remove the nut (1) and the washer (2) fixing the band (3).

- (1) Nut: Reuse
(2) Washer: Reuse
(3) Band: Reuse

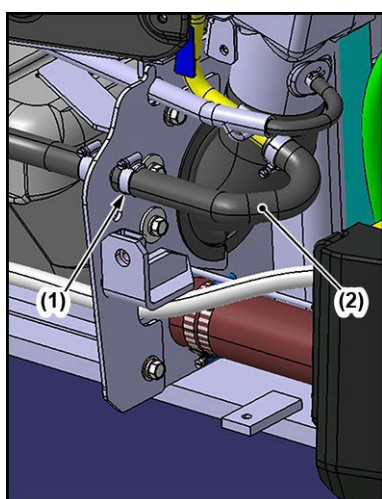


2. Remove the hose clamp (1).
3. Remove the fuel hose (2).

■ NOTE

- Use rags to prevent fuel leakage from the fuel hose (2).

Tightening torque	Clamp	4.9 to 5.9 N·m 50.0 to 60.0 kgf·m 3.6 to 4.4 lbf·ft
-------------------	-------	---

- (1) Hose clamp: Reuse
(2) Hose: Reuse

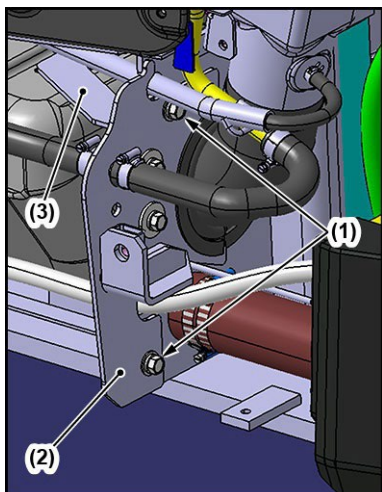


4. Remove the bolts (1) fastening the plate (2).
5. Remove the plate (2).

■ **NOTE**

- **Remove the stay (3) together with the plate (2).**


- (1) Bolt x 2: Reuse
- (2) Plate: Reuse
- (3) Stay: Reuse

9. Removing the switch box

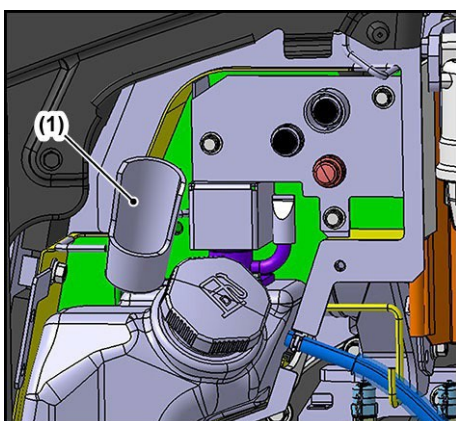


1. Remove the holder (1).

- (1) Holder: Reuse

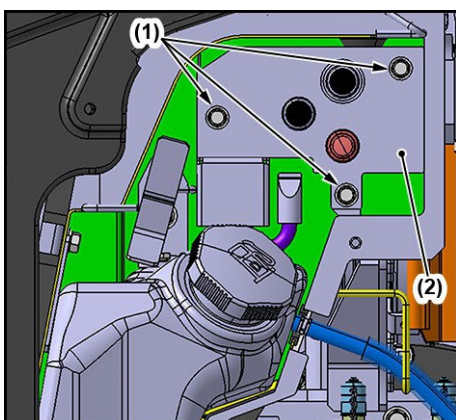

2. Remove the bolts (1).

- (1) Bolts x 3: Reuse
- (2) Switch box

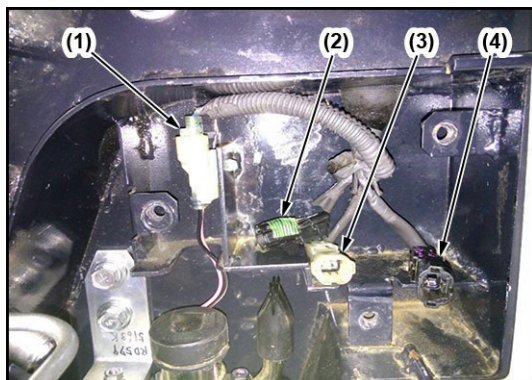


3. Disconnect the connectors (1), (2), (3), and (4).

■ **NOTE**

- **To access the connectors, pull the switch box toward you.**


- (1) Connector: Fuel supply sensor; Reuse
 (2) Connector: To LCD meter remote wake up SW; Reuse
 (3) Connector: To Fuel supply stop SW; Reuse
 (4) Connector: To Fuel supply start SW; Reuse

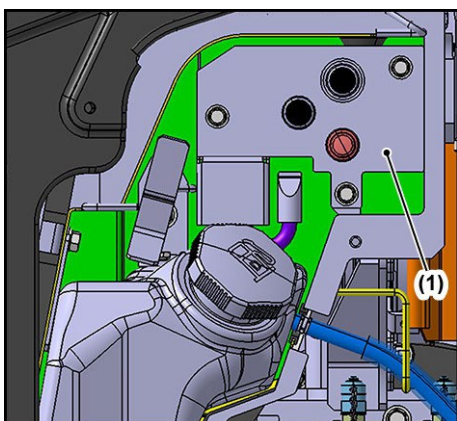

4. Remove the switch box (1).

- (1) Switch box: Reuse

10. Removing the fuel sub tank

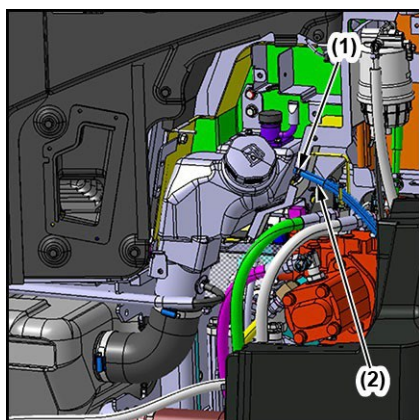


1. Remove the hose clip (1).
 2. Remove the fuel hose (blue marked) (2).

■ **NOTE**


- **Use rags to prevent fuel leakage from the hose (2).**

- (1) Hose clip: Reuse
 (2) Fuel hose: Reuse

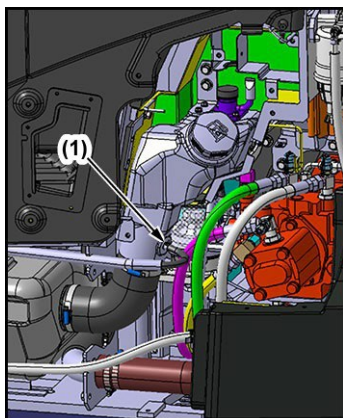

3. Remove the hose clip (1).

(1) Hose Clip

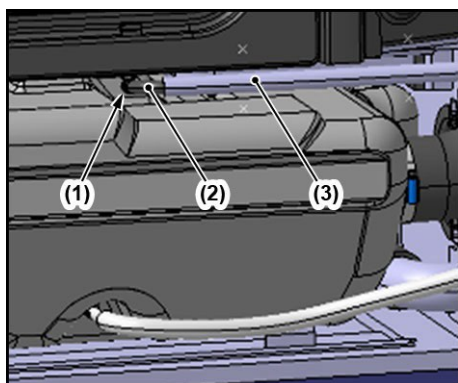

4. Remove the hose clip (1).

5. Remove the fuel hose (2) together with the protective cover (3).


■ **NOTE**

- Use rags to prevent fuel leakage from the fuel hose (2).

(1) Hose clip: Reuse

(2) Fuel hose

(3) Protective cover: Reuse

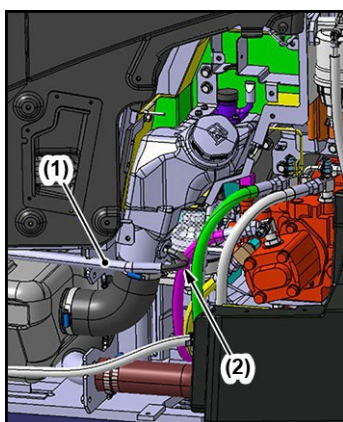


6. Remove the protective cover (1) from the fuel hose (2).

■ **NOTE**

- The protective cover (1) is reused in step 14.4.

(1) Protective cover: Reuse

(2) Fuel hose

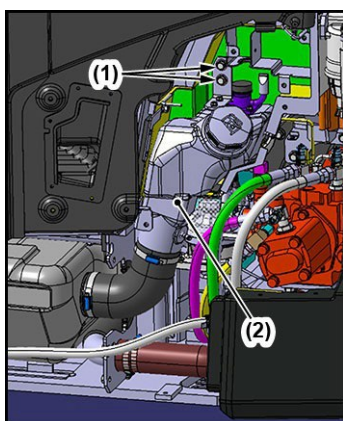


7. Remove the bolts (1) fixing the fuel sub tank (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

(1) Bolt x 2: Reuse


(2) Fuel sub tank

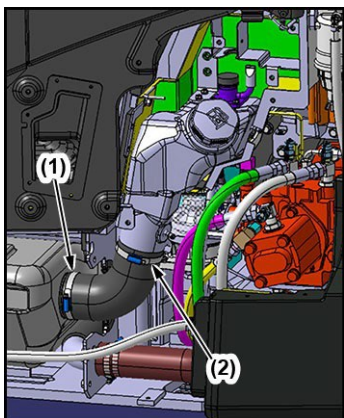

8. Remove the hose clamps (1) and (2).

Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
-------------------	-------	---

- (1) Hose clamp: Reuse
- (2) Hose clamp

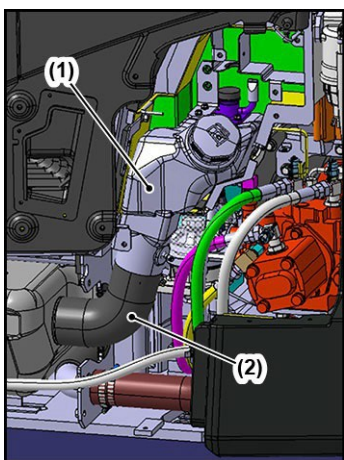


9. Remove the fuel sub tank (1).

10. Remove the fuel hose (2).


- (1) Fuel sub tank
- (2) Fuel hose

11. Disassembling the fuel sub tank

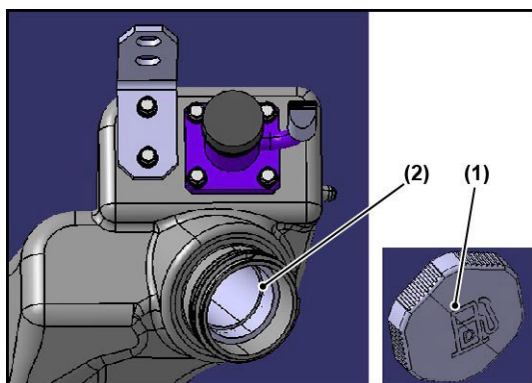

1. Remove the cap (1) and the filter (2).


- (1) Cap: Reuse
- (2) Filter: Reuse

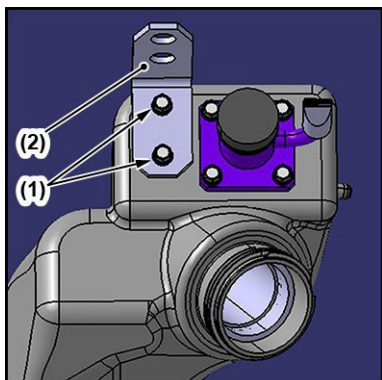

2. Remove the bolts (1) and the stay (2).

Tightening torque	Bolt (M6)	7.8 to 9.3 N·m 0.8 to 0.9 kgf·m 5.8 to 6.9 lbf·ft
-------------------	-----------	---

- (1) Bolt x 2: Reuse
- (2) Stay: Reuse

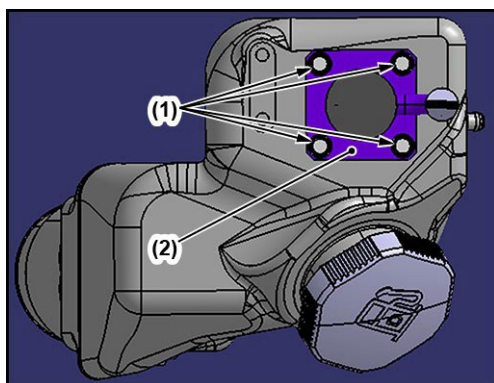


3. Remove the bolts (1) and the fuel sensor (2).

Tightening torque	Bolt (M6)	7.8 to 9.3 N·m 0.8 to 0.9 kgf·m 5.8 to 6.9 lbf·ft
-------------------	-----------	---


- (1) Bolt x 4: Reuse
- (2) Fuel sensor: Reuse

12. Attach the mounting parts to the new fuel sub tank

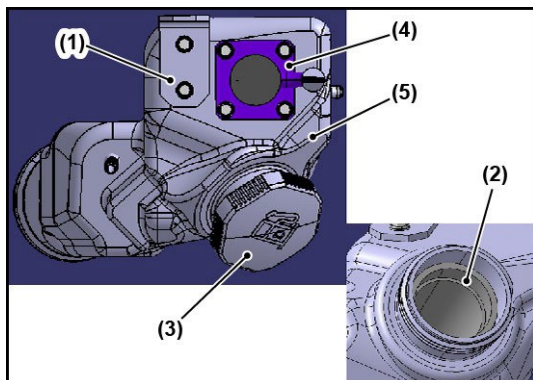

1. Attach the stay (1), the filter (2), the cap (3) and the fuel sensor (4) to the new fuel sub tank (5) in the reverse order from step 11.1 to 11.3.

- (1) Stay: Reuse parts
- (2) Filter: Reuse parts
- (3) Cap: Reuse parts
- (4) Fuel sensor: Reuse parts
- (5) Fuel sub tank (RD379-51615)

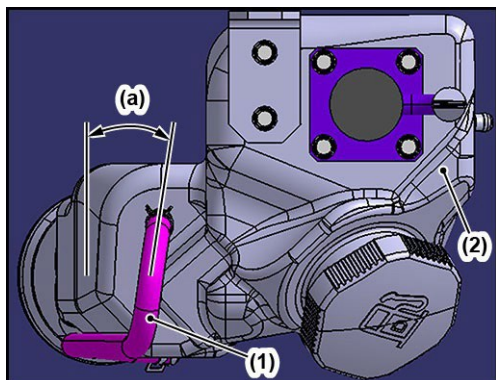


2. Install the fuel hose (1) to the fuel sub tank (2).

(1) Fuel hose (RD579-51170)

(2) Fuel sub tank

(a) 5°


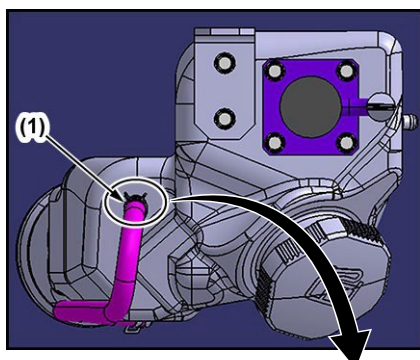


3. Install the hose clip (1).

■ **IMPORTANT**

- Direction of the hose clip should be as shown in the illustration.

(1) Hose clip (14911-42750)

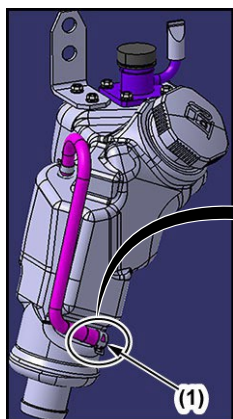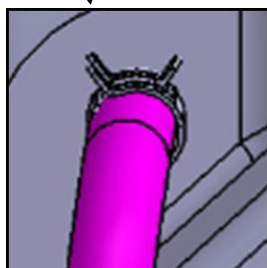


4. Install the hose clip (1) to the fuel hose (2).

■ **IMPORTANT**



- Direction of the band should be as shown in the illustration.

(1) Hose clip (16241-73360)


(2) Fuel hose (RD579-51170)


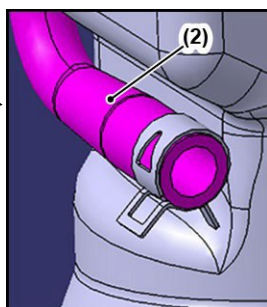


13. Installing the rubber cushion

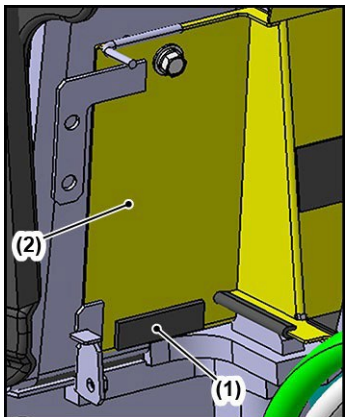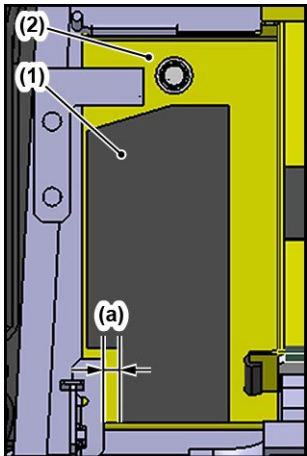	1. Remove the rubber cushion (1) from the support panel (2). (1) Rubber cushion (2) Support panel
	2. Attach the rubber cushion (1) to the support panel (2). ■ NOTE • Clean the surface of support panel with cleaning solution before the rubber cushion will be attached. (1) Rubber cushion (RD379-51870) (2) Support panel (a) 10 mm

14. Installing the fuel sub tank

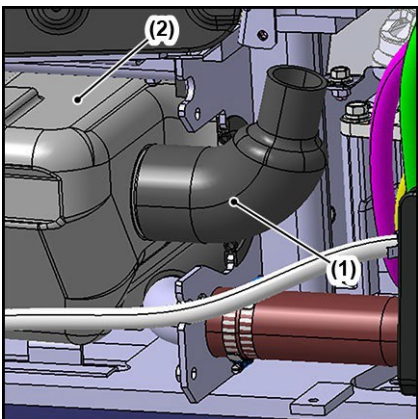	1. Attach the fuel hose (1) to the fuel main tank (2). (1) Fuel hose (RD579-51180) (2) Fuel main tank
---	---

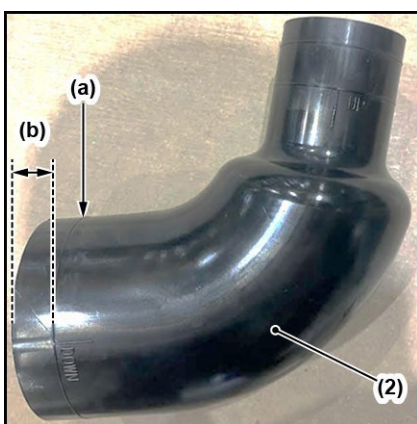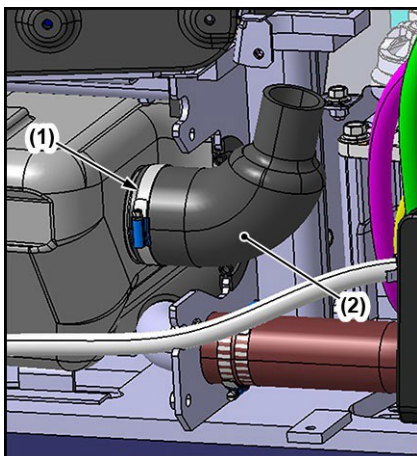

2. Attach the hose clamp (1) to the fuel hose (2).

■ **IMPORTANT**

- **Direction of the hose clamp should be as shown in the illustration.**
- **The hose clamp should be in the hose clamp fixing area (b).**


Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
-------------------	-------	---

(1) Hose clamp: Reuse parts

(2) Fuel hose

(a) Line mark


(b) Hose clamp fixing area

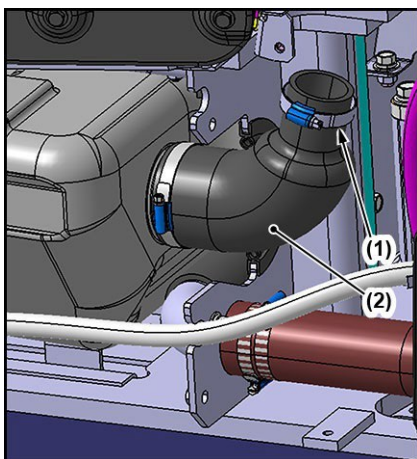

3. Hang the hose clamp (1) around the fuel hose (2).


(1) Hose clamp (35820-15180)

(2) Fuel hose

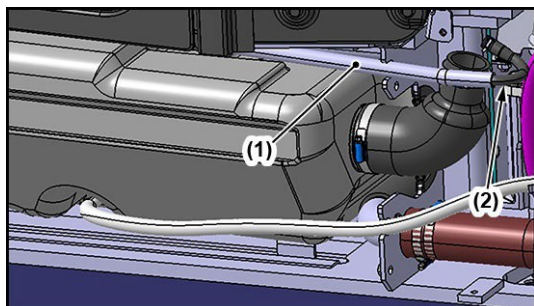

4. Install the protective cover (1) to the fuel hose (2).

- (1) Protective cover: Reuse parts
- (2) Fuel hose (RD579-51120)

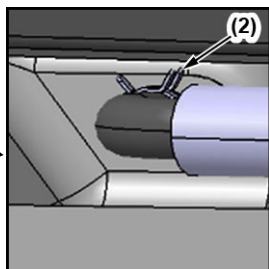


5. Install the fuel hose (1) to the fuel main tank (3) with the hose clip (2).

■ **NOTE**


- The direction of the hose clip should be as shown in the illustration.



- (1) Fuel hose
- (2) Hose clip: Reuse parts
- (3) Fuel main tank

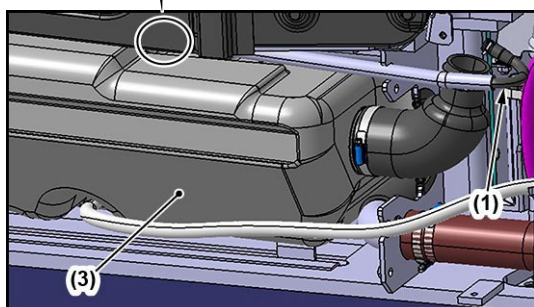

6. Pass the fuel hose (1) through the fuel hose guide (a).

- (1) Fuel hose
- (a) Fuel hose guide

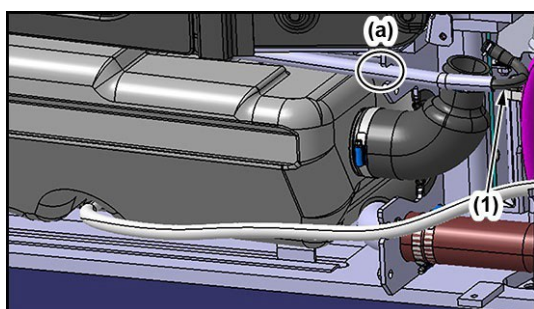

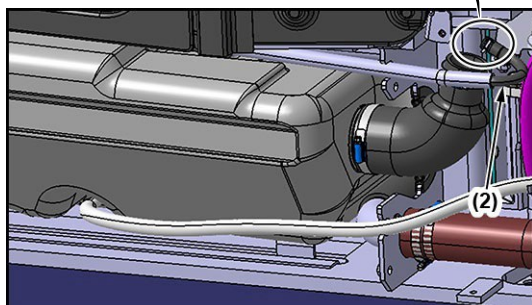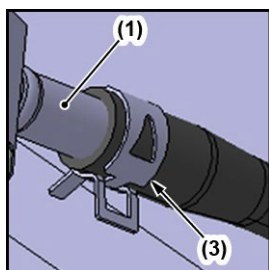


7. Install the joint (1) to the fuel hose (2) with the hose clip (3).

■ **IMPORTANT**

- **Direction of the hose clip should be as shown in the illustration.**


- (1) Joint (RD579-51160)
 (2) Fuel hose
 (3) Hose clip (16241-73360)

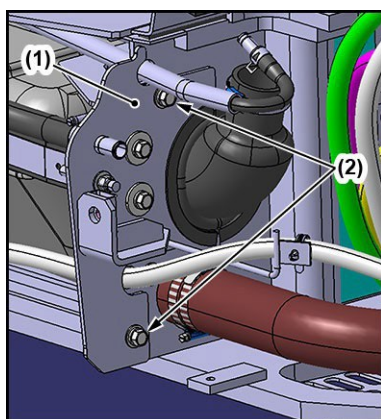

8. Install the plate (1) with the bolts (2) in the reverse order from step 8.4 to 8.5.


Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Plate: Reuse parts
 (2) Bolt x 2: Reuse parts

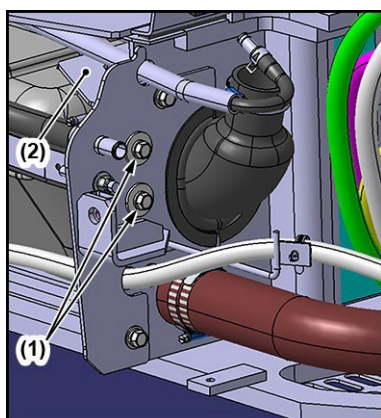

9. Loosen the bolts (1) which fixing the stay (2).

- (1) Bolt x 2: Reuse parts
 (2) Stay: Reuse parts

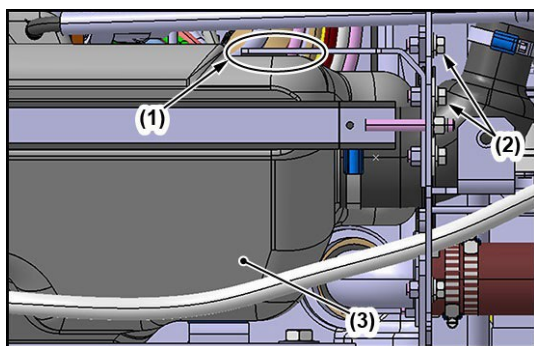


10. Adjust the position of the stay (1) so that it touches the top of the fuel main tank (3) and tighten the bolts (2) again.

■ **IMPORTANT**

- **Make sure that the rubber cushion contacts on the top of the fuel main tank.**

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Stay: Reuse parts
(2) Bolt x 2: Reuse parts
(3) Fuel main tank

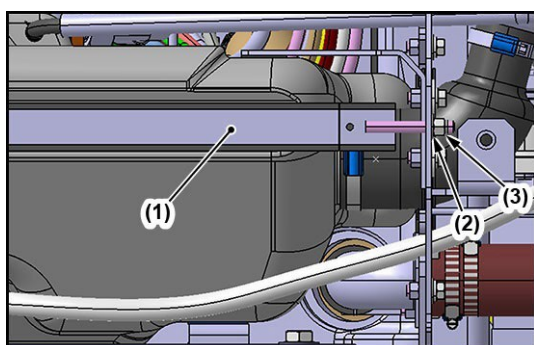

11. Install the band (1), the washer (2), and the nut (3) in the reverse order of step 8.1.



■ **IMPORTANT**

- **Adjust the length (a) by tightening and/or loosening the nut (3).**

Tightening torque	Nut (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	-----------	---

Length (a)	20 to 30 mm 0.79 to 1.18 inch
------------	----------------------------------

- (1) Band
(2) Washer
(3) Nut

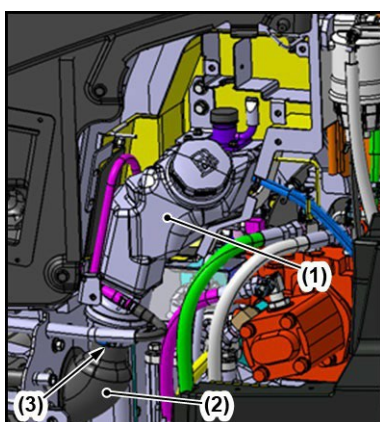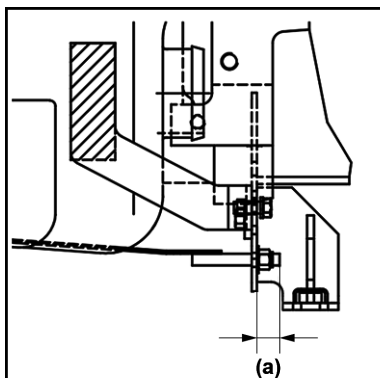


12. Attach the fuel hose (2) to the fuel sub tank (1).

■ **NOTE**

- **Do not fasten the hose clamp (3) until step 14.14.**


- (1) Fuel sub tank
(2) Fuel hose
(3) Hose clamp (35820-15181)

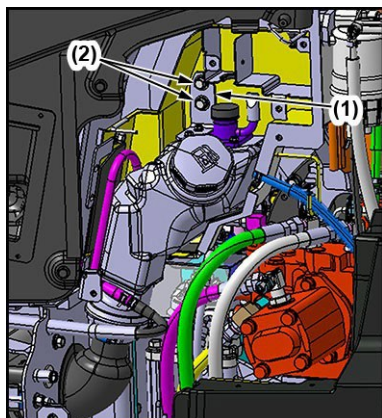

13. Attach the stay (1) with the bolts (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Stay
(2) Bolt x 2: Reuse parts

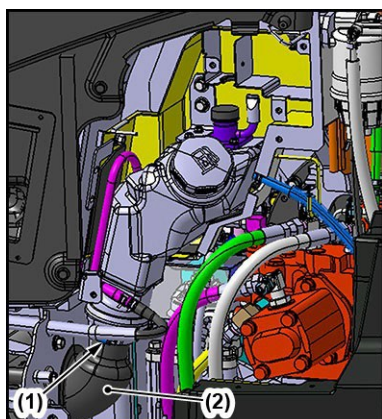



14. Attach the hose clamp (1) to the fuel hose (2).

■ **NOTE**

- The hose clamp should be positioned inside the area (b).




Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
-------------------	-------	---

- (1) Hose clamp
(2) Fuel hose
(a) Line mark

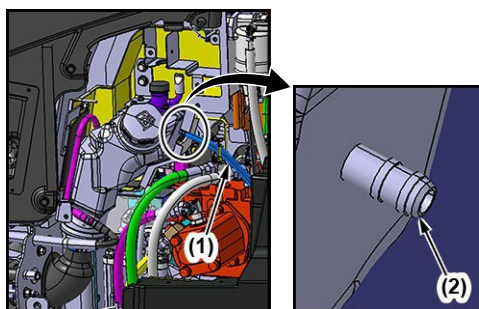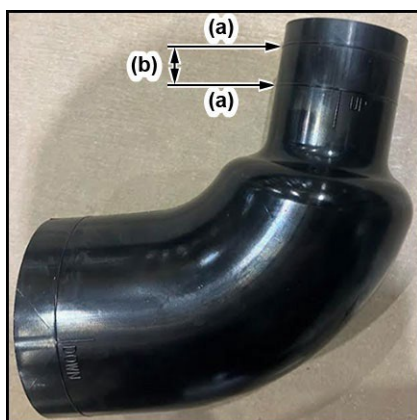

15. Attach the fuel hose (1) onto the union (2) of the fuel sub tank.

- (1) Fuel hose
(2) Union

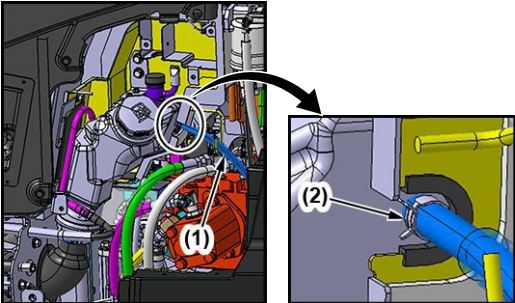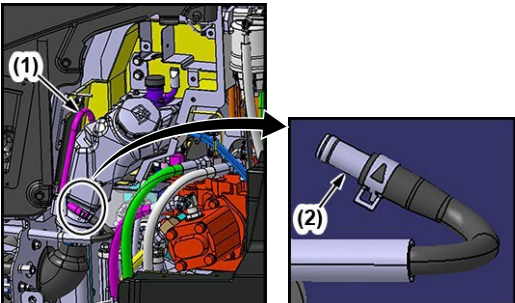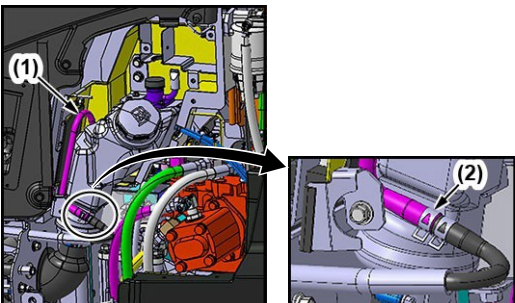
	16. Attach the fuel hose (1) with the hose clip (2). ■ IMPORTANT • Direction of the hose clip should be as shown in the illustration. (1) Fuel hose: Reuse parts (2) Hose clip: Reuse parts
	17. Attach the fuel hose (1) onto the joint (2). (1) Fuel hose (2) Joint
	18. Fasten the fuel hose (1) with the hose clip (2). ■ IMPORTANT • The direction of the two hose clips should be as shown in the illustration. (1) Fuel hose (2) Hose clip

15. Reassembling

	1. Reassemble the fuel suction pump cover, the swivel cover LH, the panel, the weight cover, the cover, the fuel hose and the switch box in the reverse order of step 2, 3, 4, 5, 6, 7, 9.
--	---

16. Starting the engine

	1. Attach the negative cable of the battery or turn ON the battery isolator switch.
	2. Refill the drained fuel from step 1.

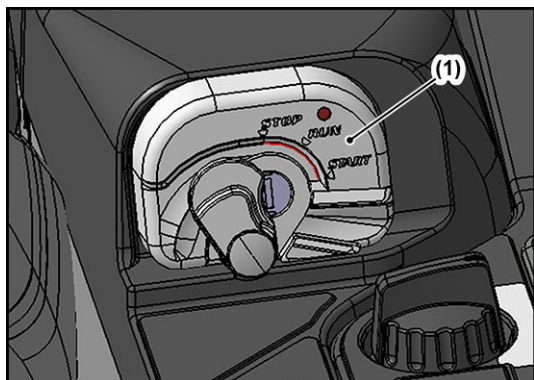

3. Insert the key into the ignition switch (1) and turn it to the "RUN" position.

(1) Ignition switch

4. Wait about one minute with starter key in "RUN" position. The fuel system is automatically aerated.

5. Start the engine.

■ **NOTE**

- Please repeat the steps 3 and 4 if the engine stops after starting because the fuel system has not yet been completely de-aerated.

REPAIR PROCEDURE FOR FUEL LEAKING FROM THE FUEL SUB TANK (NON FUEL SUCTION PUMP)


Kit list

Tank, kit (sub): RD579-95200

Parts list


No.	Parts No.	Part Name	Q'ty	Remarks
(1)	RD579-51120	TUBE, FUEL (1)	1	
(2)	16241-73360	BAND, PIPE	2	
(3)	RD579-51160	JOINT, STR PIPE	1	
(4)	RD579-51170	TUBE, FUEL (2)	1	
(5)	14911-42750	CLIP, PIPE	1	
(6)	RD579-51610	TANK, FUEL	1	
(7)	RD579-51180	HOSE (FUEL)	1	
(8)	35820-15180	BAND	1	
(9)	RD579-51870	CUSHION (FUEL TANK)	1	

All parts dismantled during disassembly, except those in the kit, are reused.

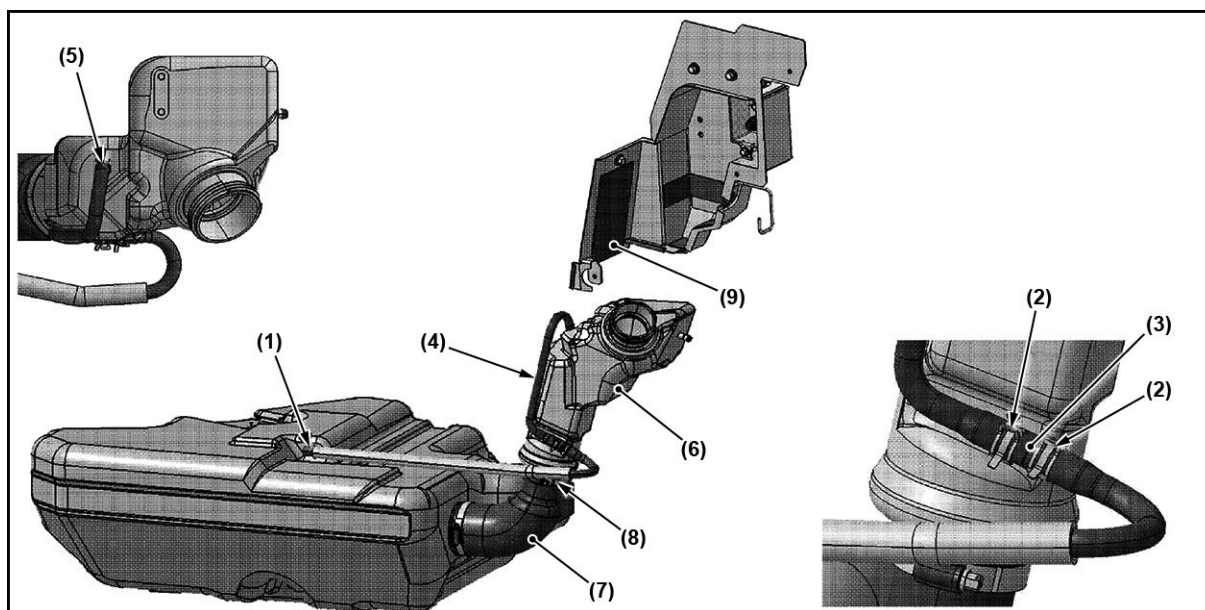

Required tools


No.	Tool Name	Remarks
(1)	10 mm spanner	
(2)	Torque wrench	Required torque: 2.0 to 12.0 N·m
(3)	Extension bar (70 mm)	
(4)	7 mm socket	
(5)	8 mm socket	
(6)	Torque wrench	Required torque: 19.0 to 27.5 N·m
(7)	Extension bar (150 mm)	
(8)	12 mm socket	
(9)	Torque wrench	Required torque: 48.1 to 55.9 N·m
(10)	14 mm socket	
(11)	Universal pliers	
(12)	Jerry can	20L x 3

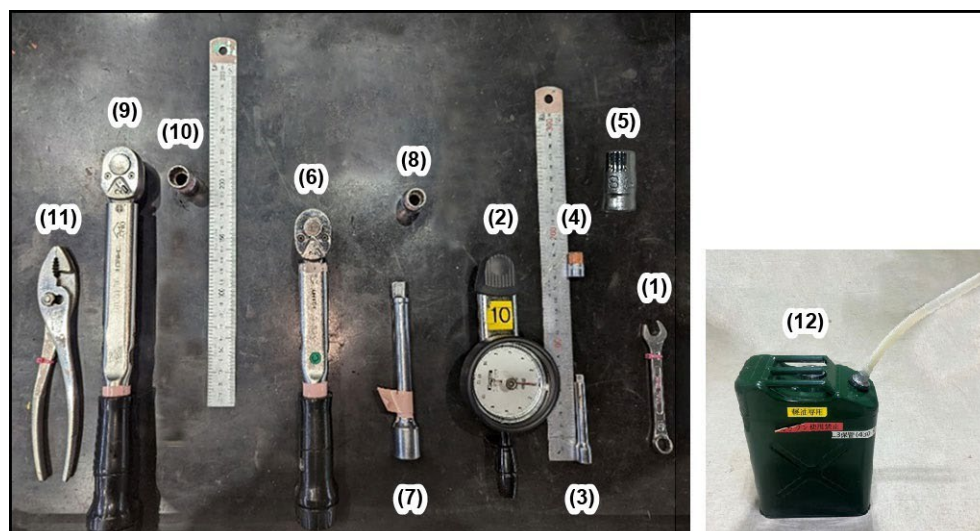Photo of tools**! WARNING**


To avoid personal injury or death:


- Park the machine on a firm and level ground.
- Lower the bucket to the ground.
- Set all controls in their neutral positions.
- Release all residual pressure of the hydraulic system.
- Stop the engine. Remove the key from the ignition.
- The engine, hydraulic components and coolants can be hot.
Wait until all the components are cooled down sufficiently to avoid burns.
- Clean the work area and the machine.
- Disconnect the battery negative cable.
- Hang a "DO NOT OPERATE" tag on the operator station.
- Put on working clothes and personal protective equipment.
- Read all instructions and safety instructions in this bulletin and safety labels on your machine.
- Follow the local safety regulations and/or laws in your country.
- If you are working with other people, make sure that your signals and communications are fully understandable for additional safety.

1. Preparation

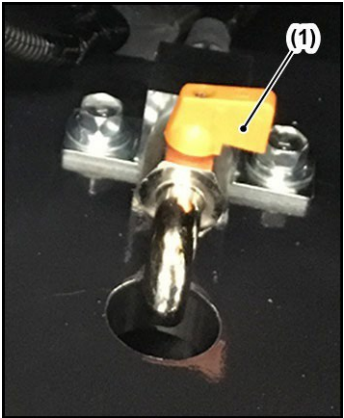	1. Disconnect the negative cable from the battery or use the battery isolator switch to cut off the power supply to the excavator.
	2. Place a jerrycan under the fuel drain cock. 3. Open the cover (1). (1) Cover
	4. Open the fuel drain cock (1) and drain the fuel completely. ■ NOTE ● Fuel may leak if the fuel remains in the tank. (1) Fuel drain cock

2. Removing the fuel suction cover

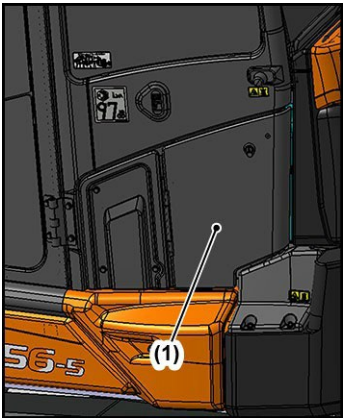	1. Open the fuel suction cover (1). (1) Fuel suction cover
---	---

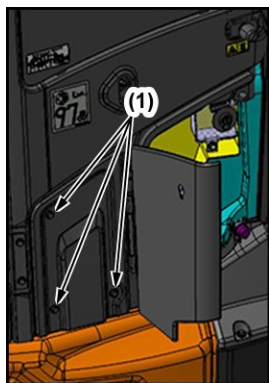


2. Remove the bolts (1).
3. Remove the fuel suction cover (2).

Tightening torque	Bolt (M8)	19.0 to 25.0 N·m 1.9 to 2.5 kgf·m 14.0 to 18.4 lbf·ft
-------------------	-----------	---

- (1) Bolt x 4: Reuse
- (2) Fuel suction cover: Reuse

3. Removing the swivel cover LH

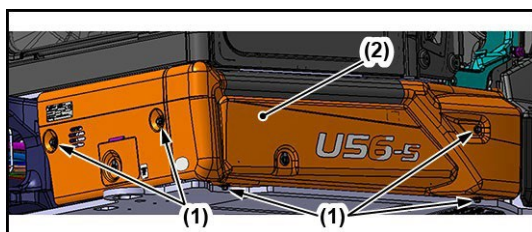


1. Remove the bolts (1).
2. Remove the swivel cover LH (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---


- (1) Bolt x 5: Reuse
- (2) Swivel cover LH: Reuse

4. Removing the panel

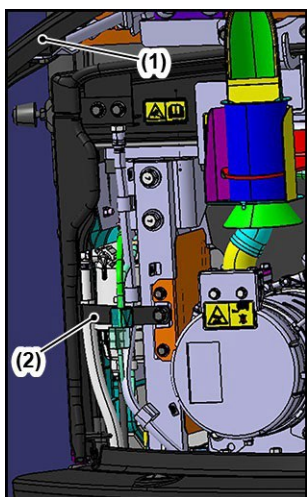

1. Open the engine bonnet (1) and remove the harness clamp (2).

- (1) Engine bonnet
- (2) Harness clamp

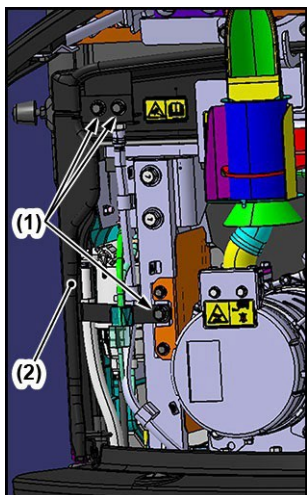


2. Remove the bolts (1).
3. Remove the panel (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Bolt x 3: Reuse
- (2) Panel: Reuse

5. Removing the weight cover

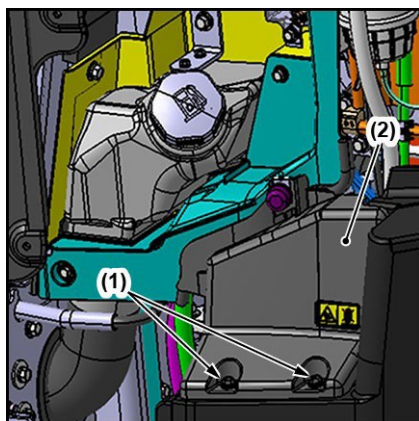


1. Remove the bolts (1).
2. Remove the weight cover (2).

Tightening torque	Bolt (M8)	23.5 to 27.5 N·m 2.40 to 2.80 kgf·m 17.3 to 20.3 lbf·ft
-------------------	-----------	---

- (1) Bolt x 2: Reuse
- (2) Weight cover: Reuse

6. Removing the cover

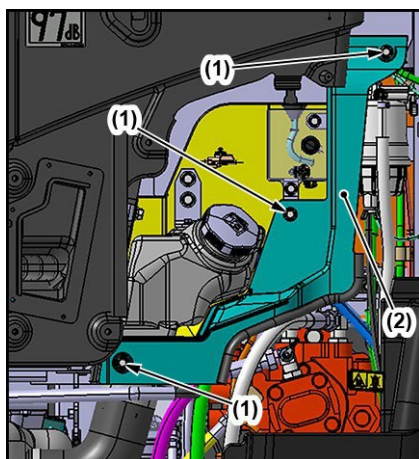


1. Remove the bolts (1).
2. Remove the cover (2).

Tightening torque	Bolt (M8)	23.5 to 27.5 N·m 2.40 to 2.80 kgf·m 17.3 to 20.3 lbf·ft
-------------------	-----------	---


- (1) Bolt x 3: Reuse
- (2) Cover: Reuse

7. Removing the plate

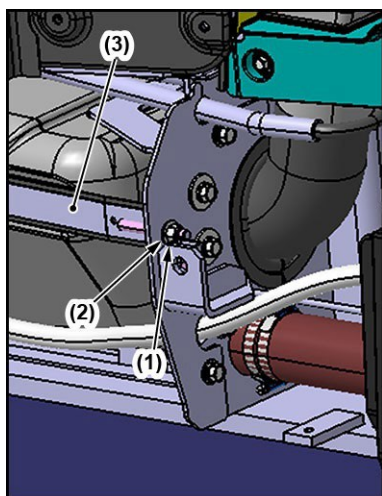

1. Remove the nut (1) and the washer (2) fixing the band (3).

- (1) Nut: Reuse
- (2) Washer: Reuse
- (3) Band: Reuse

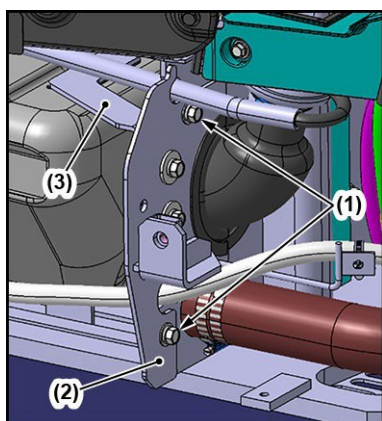

2. Remove the bolts (1) fastening the plate (2).
3. Remove the plate (2).


■ NOTE

- Remove the stay (3) together with the plate (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Bolt x 2: Reuse
- (2) Plate: Reuse
- (3) Stay: Reuse

8. Removing the fuel sub tank

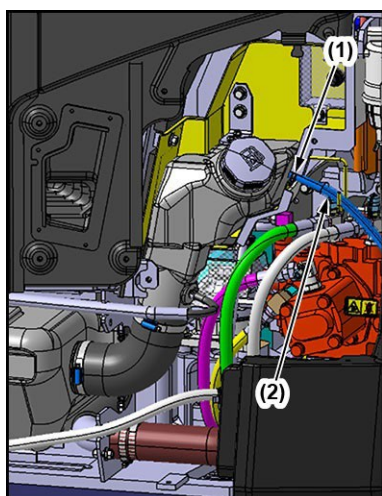


1. Remove the hose clip (1).
2. Remove the fuel hose (blue marked) (2).

■ NOTE


- Use rags to prevent fuel leakage from the fuel hose (2).

- (1) Hose clip: Reuse
- (2) Fuel hose: Reuse

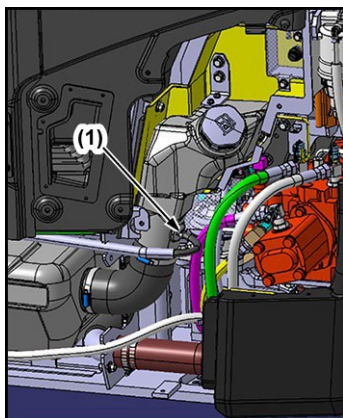

3. Remove the hose clip (1).

(1) Hose Clip

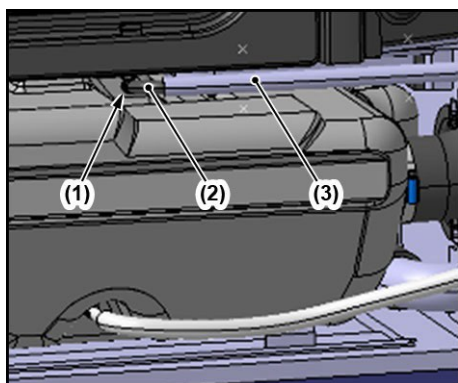

4. Remove the hose clip (1).

5. Remove the fuel hose (2) together with the protective cover (3).


■ **NOTE**

- Use rags to prevent fuel leakage from the fuel hose (2).

(1) Hose clip: Reuse

(2) Fuel hose

(3) Protective cover: Reuse

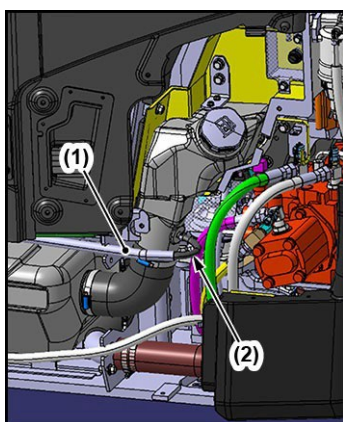


6. Remove the protective cover (1) from the fuel hose (2).

■ **NOTE**

- The protective cover (1) is reused in step 12.4.

(1) Protective cover: Reuse

(2) Fuel hose

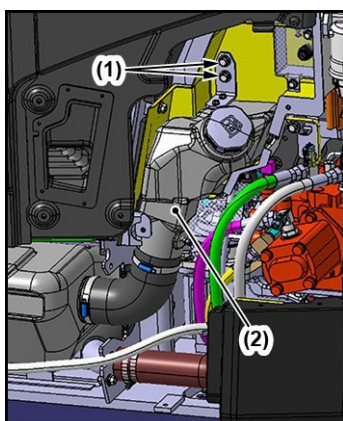


7. Remove the bolts (1) fixing the fuel sub tank (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

(1) Bolt x 2: Reuse


(2) Fuel sub tank

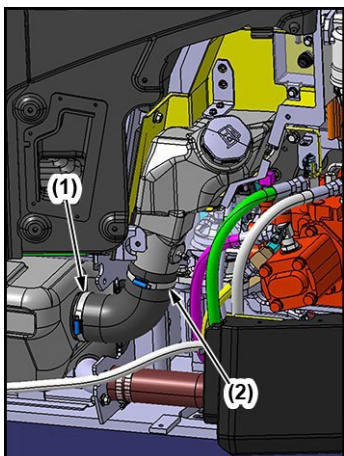

8. Remove the hose clamps (1) and (2).

Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
	(1) Hose clamp: Reuse	
	(2) Hose clamp	

- (1) Hose clamp: Reuse
- (2) Hose clamp

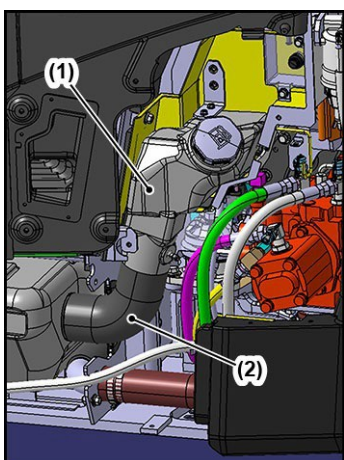


9. Remove the fuel sub tank (1).

10. Remove the fuel hose (2).


- (1) Fuel sub tank
- (2) Fuel hose

9. Disassembling the fuel sub tank

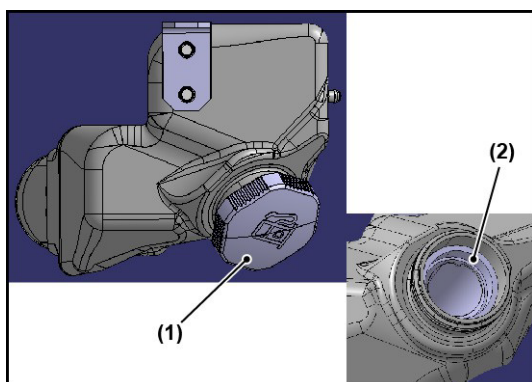

1. Remove the cap (1) and the filter (2).

- (1) Cap: Reuse
- (2) Filter: Reuse

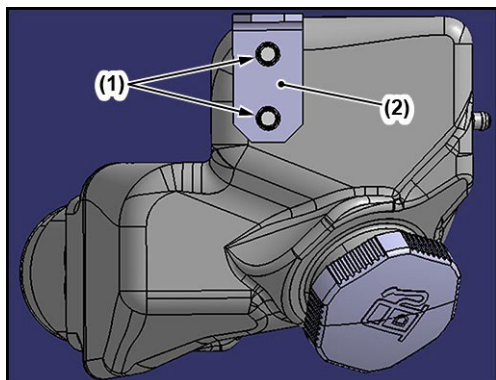


2. Remove the bolts (1) and the stay (2).

Tightening torque	Bolt (M6)	7.8 to 9.3 N·m 0.8 to 0.9 kgf·m 5.8 to 6.9 lbf·ft
-------------------	-----------	---


- (1) Bolt x 2: Reuse
(2) Stay: Reuse

10. Attach the mounting parts to the new fuel sub tank

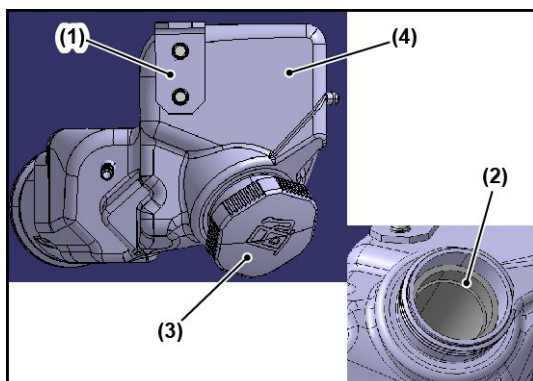



1. Install the stays (1), the filter (2), and the cap (3) to the new fuel sub tank (4) in the reverse order from steps 9.1 and 9.2.

- (1) Stay: Reuse parts
(2) Filter: Reuse parts
(3) Cap: Reuse parts
(4) Fuel sub tank (RD579-51615)

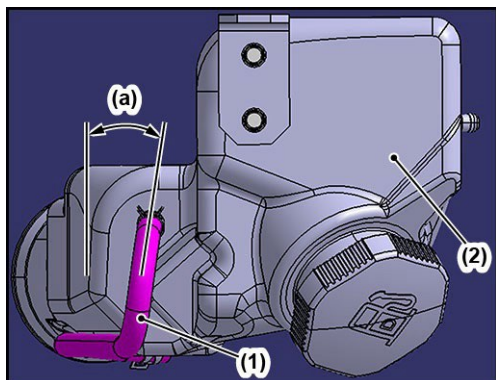

2. Install the fuel hose (1) to the fuel sub tank (2).

- (1) Fuel hose (RD579-51170)
(2) Fuel sub tank
(a) 5°

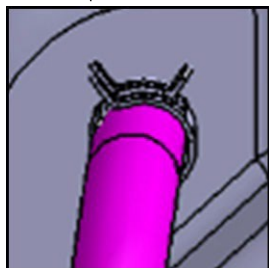
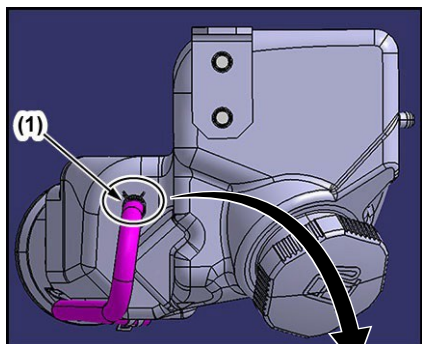


3. Install the hose clip (1).

■ **IMPORTANT**

- Direction of the hose clip should be as shown in the illustration.

(1) Hose clip (14911-42750)

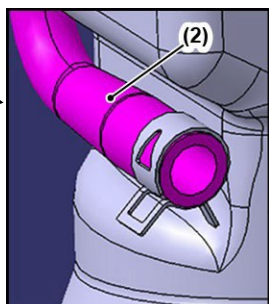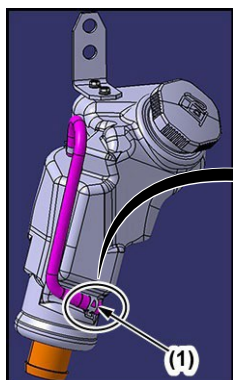

4. Install the hose clip (1) to the fuel hose (2).


■ **IMPORTANT**

- Direction of the hose clip should be as shown in the illustration.

(1) Hose clip (16241-73360)

(2) Fuel hose (RD579-51170)


11. Installing rubber cushion

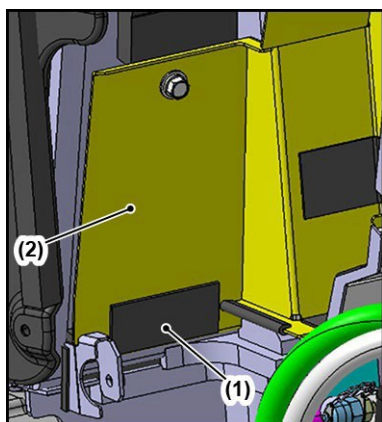

1. Remove the rubber cushion (1) from the support panel (2).

(1) Rubber cushion

(2) Support panel

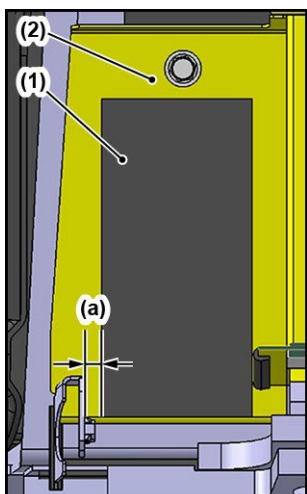


2. Attach the rubber cushion (1) to the support panel (2).

■ **NOTE**

- **Clean the surface of support panel with cleaning solution before the rubber cushion will be attached.**



- (1) Rubber cushion (RD379-51870)
(2) Support panel
(a) 10 mm

12. Installing the fuel sub tank

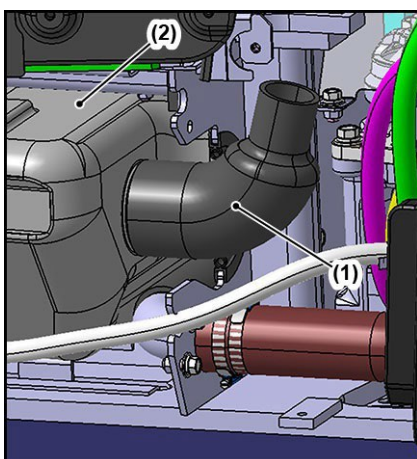

1. Attach the fuel hose (1) to the fuel main tank (2).

- (1) Fuel hose (RD579-51180)
(2) Fuel main tank

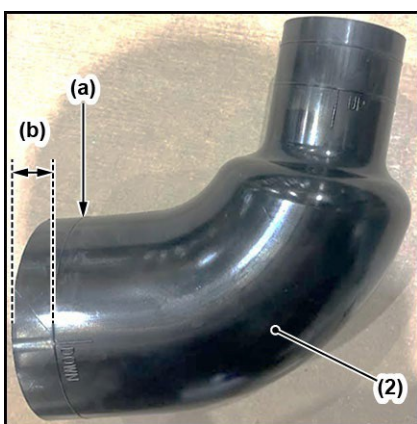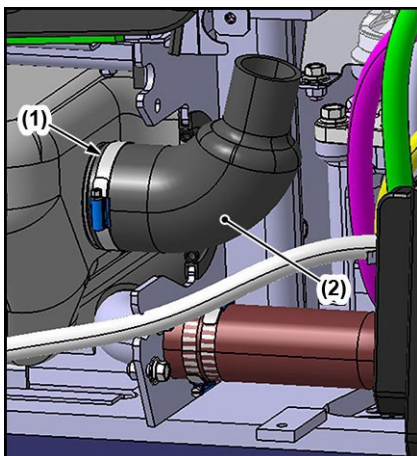


2. Attach the hose clamp (1) to the fuel hose (2).

■ **IMPORTANT**

- **Direction of the hose clamp should be as shown in the illustration.**
- **The hose clamp should be in the hose clamp fixing area (b).**


Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
-------------------	-------	---

- (1) Hose clamp: Reuse parts
 (2) Fuel hose
 (a) Line mark
 (b) Hose clamp fixing area

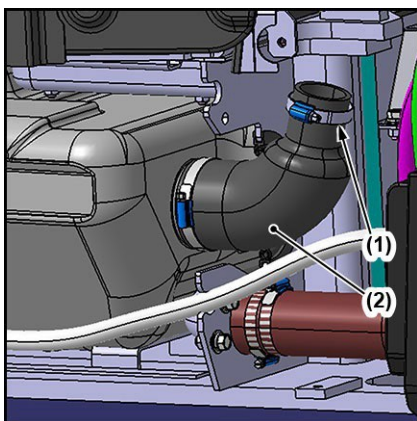


3. Hang the hose clamp (1) around the fuel hose (2).

- (1) Hose clamp (35820-15180)
 (2) Fuel hose

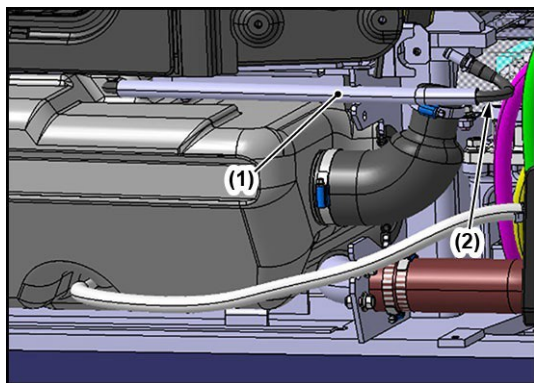

4. Install the protective cover (1) to the fuel hose (2).

- (1) Protective cover: Reuse parts
- (2) Fuel hose (RD579-51120)

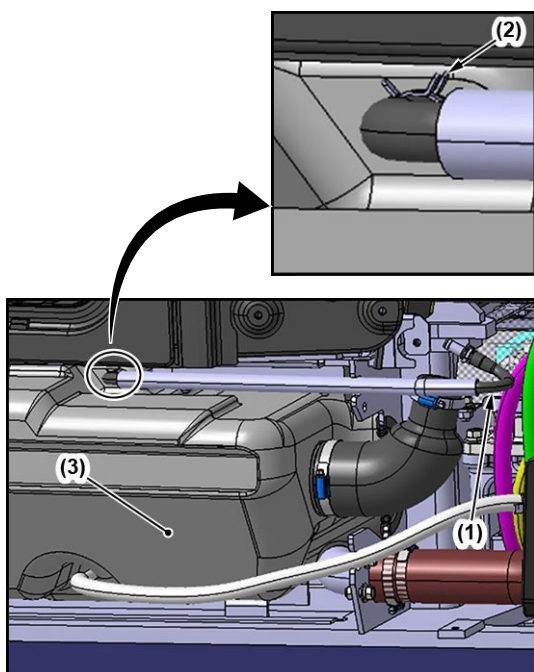


5. Install the fuel hose (1) to the fuel main tank (3) with the hose clip (2).

■ **NOTE**



- The direction of the hose clip should be as shown in the illustration.

- (1) Fuel hose
- (2) Hose clip: Reuse parts
- (3) Fuel main tank

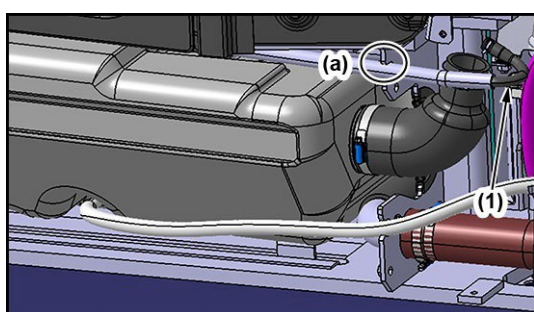

6. Pass the fuel hose (1) through the fuel hose guide (a).

- (1) Fuel hose
- (a) Hose guide

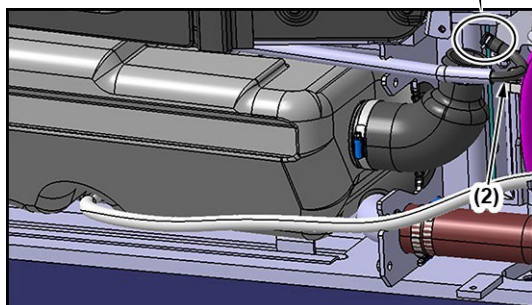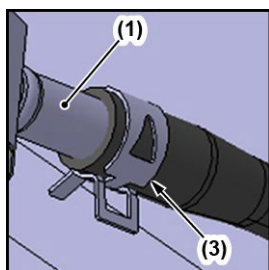


7. Install the joint (1) to the fuel hose (2) with the hose clip (3).

■ **IMPORTANT**


- **Direction of the hose clip should be as shown in the illustration.**

- (1) Joint (RD579-51160)
- (2) Fuel hose
- (3) Hose clip (16241-73360)

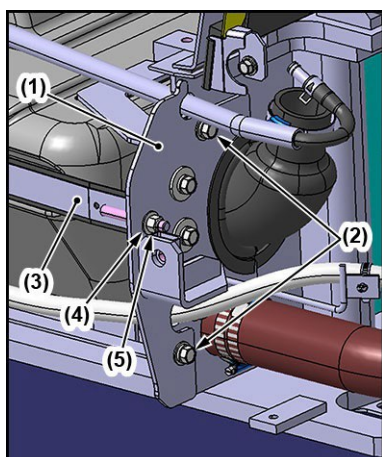


8. Install the plate (1), the bolts (2), the band (3), the washer (4) and nut (5) in the reverse order of steps 7.1, 7.2, and 7.3.

- (1) Plate: Reuse parts
- (2) Bolt x 2: Reused parts
- (3) Band: Reused parts
- (4) Washer: Reused parts
- (5) Nut: Reused parts

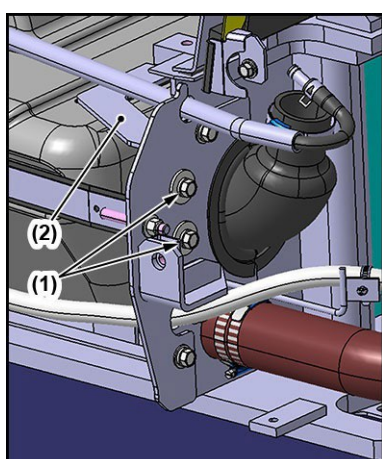

9. Loosen the bolts (1) which fixing the stay (2).

- (1) Bolt x 2: Reuse parts
- (2) Stay: Reuse parts

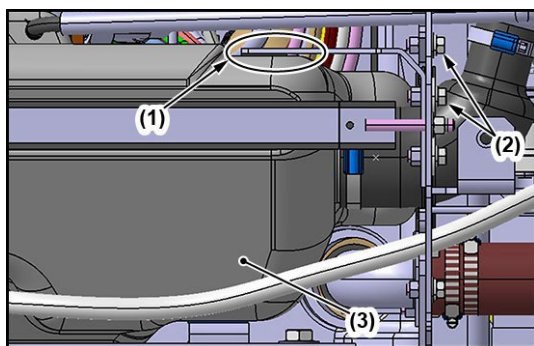


10. Adjust the position of the stay (1) so that it touches the top of the fuel main tank (3) and tighten the bolts (2) again.

■ **IMPORTANT**

- **Make sure that the rubber cushion contacts on the top of the fuel main tank.**

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Stay: Reuse parts
(2) Bolt x 2: Reuse parts
(3) Fuel main tank

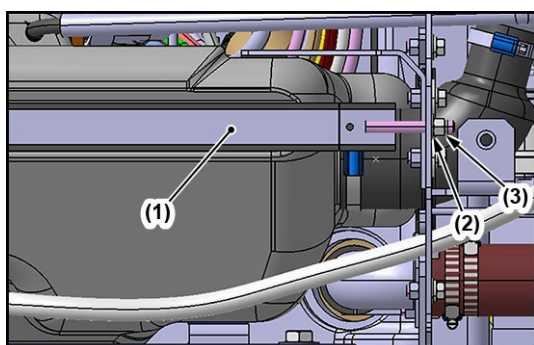

11. Install the band (1), the washer (2), and the nut (3) in the reverse order of step 7.1.



■ **IMPORTANT**

- **Adjust the length (a) by tightening and/or loosening the nut (3).**

Tightening torque	Nut (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	-----------	---

Length (a)	20 to 30 mm 0.79 to 1.18 inch
------------	----------------------------------

- (1) Band
(2) Washer
(3) Nut

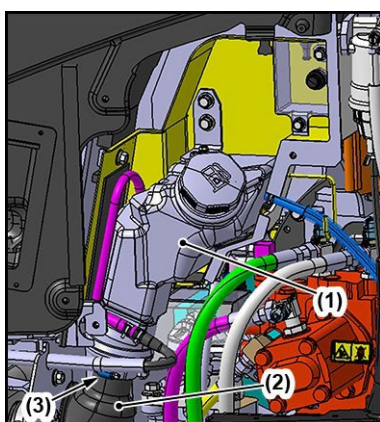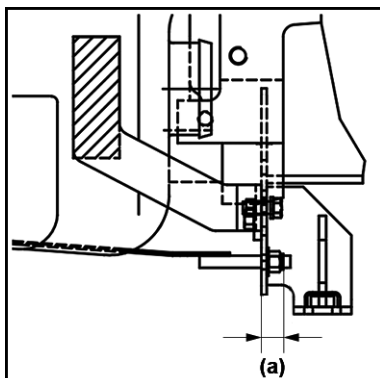


12. Attach the fuel hose (2) to the fuel sub tank (1).

■ **NOTE**

- **Do not fasten the hose clamp (3) until step 12.14.**


- (1) Fuel sub tank
(2) Fuel hose
(3) Hose clamp (35820-15181)

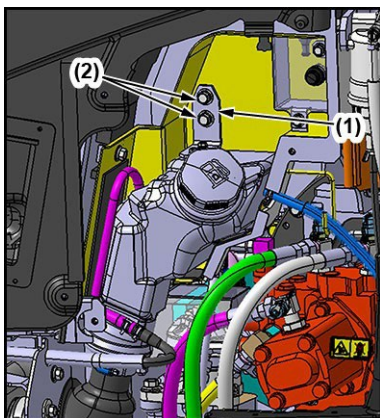

13. Attach the stay (1) with the bolts (2).

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
-------------------	------------	---

- (1) Stay
(2) Bolt x 2: Reuse parts

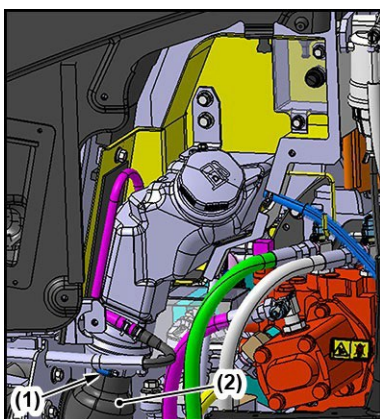



14. Attach the hose clamp (1) to the fuel hose (2).

■ **NOTE**

- The hose clamp should be positioned inside the area (b).




Tightening torque	Clamp	2.9 to 3.9 N·m 0.3 to 0.4 kgf·m 2.1 to 2.9 lbf·ft
-------------------	-------	---

- (1) Hose clamp
(2) Fuel hose
(a) Line mark

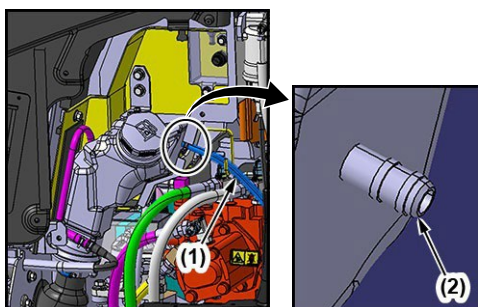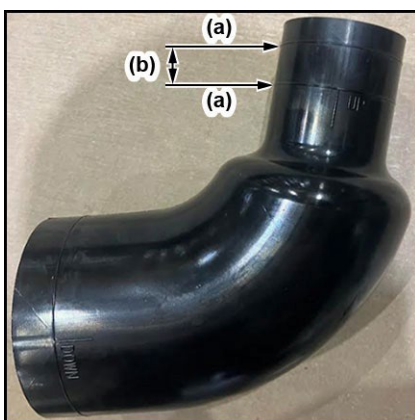

15. Attach the fuel hose (1) onto the union (2) of the fuel sub tank.

- (1) Fuel hose
(2) Union

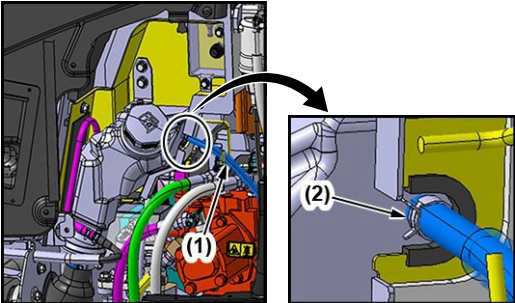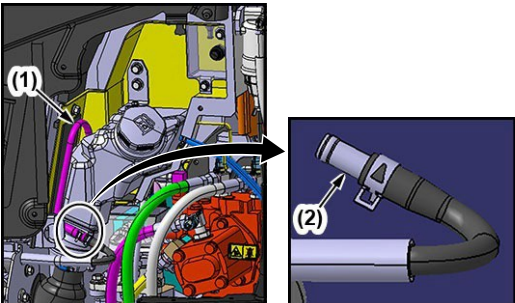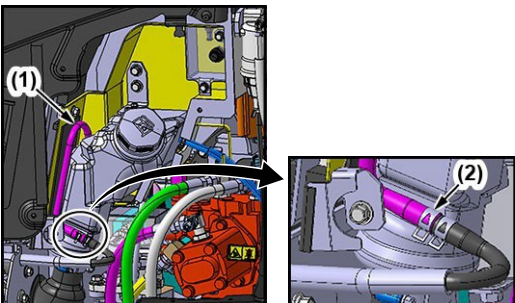
	16. Attach the fuel hose (1) with the hose clip (2). ■ IMPORTANT • Direction of the hose clip should be as shown in the illustration. (1) Fuel hose: Reuse parts (2) Hose clip: Reuse parts
	17. Attach the fuel hose (1) onto the joint (2). (1) Fuel hose (2) Joint
	18. Fasten the fuel hose (1) with the hose clip (2). ■ IMPORTANT • The direction of the two hose clips should be as shown in the illustration. (1) Fuel hose (2) Hose clip

13. Reassembling

	1. Reassemble the fuel suction cover, the swivel cover LH, the panel, the weight cover, and the cover in the reverse order of step 2, 3, 4, 5, 6.
--	--

14. Starting the engine

	1. Attach the negative cable of the battery or turn ON the battery isolator switch.
	2. Refuel the drained fuel from step 1.

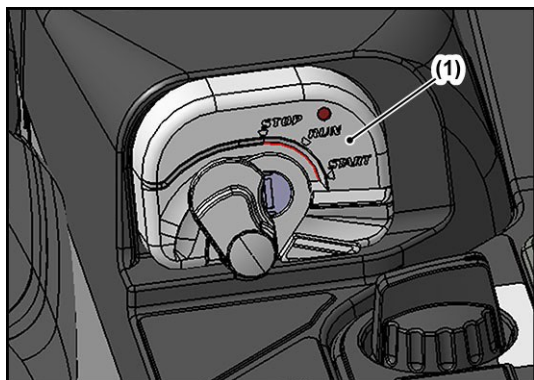

3. Insert the key into the ignition switch (1) and turn it to the "RUN" position.

(1) Ignition switch

4. Wait about one minute with starter key in "RUN" position. The fuel system is automatically aerated.

5. Start the engine.

■ **NOTE**

- Please repeat the steps 3 and 4 if the engine stops after starting because the fuel system has not yet been completely de-aerated.
- If it is difficult for the U50-5 to release air, please press repeatedly the engine priming pump until pump become stiff (10 to 30 times).

AFFECTED SERIAL NUMBER :**■ KX060-5**

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1	10004	51	10054	101	10104	151	10154	201	10206	251	10256
2	10005	52	10055	102	10105	152	10155	202	10207	252	10257
3	10006	53	10056	103	10106	153	10156	203	10208	253	10258
4	10007	54	10057	104	10107	154	10157	204	10209	254	10259
5	10008	55	10058	105	10108	155	10158	205	10210	255	10260
6	10009	56	10059	106	10109	156	10159	206	10211	256	10261
7	10010	57	10060	107	10110	157	10160	207	10212	257	10262
8	10011	58	10061	108	10111	158	10161	208	10213	258	10263
9	10012	59	10062	109	10112	159	10162	209	10214	259	10264
10	10013	60	10063	110	10113	160	10163	210	10215	260	10265
11	10014	61	10064	111	10114	161	10165	211	10216	261	10266
12	10015	62	10065	112	10115	162	10166	212	10217	262	10267
13	10016	63	10066	113	10116	163	10167	213	10218	263	10268
14	10017	64	10067	114	10117	164	10168	214	10219	264	10269
15	10018	65	10068	115	10118	165	10169	215	10220	265	10270
16	10019	66	10069	116	10119	166	10170	216	10221	266	10271
17	10020	67	10070	117	10120	167	10171	217	10222	267	10272
18	10021	68	10071	118	10121	168	10172	218	10223	268	10273
19	10022	69	10072	119	10122	169	10173	219	10224	269	10274
20	10023	70	10073	120	10123	170	10174	220	10225	270	10275
21	10024	71	10074	121	10124	171	10175	221	10226	271	10276
22	10025	72	10075	122	10125	172	10176	222	10227	272	10277
23	10026	73	10076	123	10126	173	10177	223	10228	273	10278
24	10027	74	10077	124	10127	174	10178	224	10229	274	10279
25	10028	75	10078	125	10128	175	10179	225	10230	275	10280
26	10029	76	10079	126	10129	176	10180	226	10231	276	10281
27	10030	77	10080	127	10130	177	10181	227	10232	277	10282
28	10031	78	10081	128	10131	178	10182	228	10233	278	10283
29	10032	79	10082	129	10132	179	10183	229	10234	279	10284
30	10033	80	10083	130	10133	180	10184	230	10235	280	10285
31	10034	81	10084	131	10134	181	10185	231	10236	281	10286
32	10035	82	10085	132	10135	182	10186	232	10237	282	10287
33	10036	83	10086	133	10136	183	10187	233	10238	283	10288
34	10037	84	10087	134	10137	184	10188	234	10239	284	10289
35	10038	85	10088	135	10138	185	10189	235	10240	285	10290
36	10039	86	10089	136	10139	186	10190	236	10241	286	10291
37	10040	87	10090	137	10140	187	10191	237	10242	287	10292
38	10041	88	10091	138	10141	188	10192	238	10243	288	10293
39	10042	89	10092	139	10142	189	10194	239	10244	289	10294
40	10043	90	10093	140	10143	190	10195	240	10245	290	10295
41	10044	91	10094	141	10144	191	10196	241	10246	291	10296
42	10045	92	10095	142	10145	192	10197	242	10247	292	10297
43	10046	93	10096	143	10146	193	10198	243	10248	293	10298
44	10047	94	10097	144	10147	194	10199	244	10249	294	10299
45	10048	95	10098	145	10148	195	10200	245	10250	295	10300
46	10049	96	10099	146	10149	196	10201	246	10251	296	10301
47	10050	97	10100	147	10150	197	10202	247	10252	297	10302
48	10051	98	10101	148	10151	198	10203	248	10253	298	10303
49	10052	99	10102	149	10152	199	10204	249	10254	299	10304
50	10053	100	10103	150	10153	200	10205	250	10255	300	10305

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
301	10306	351	10356	401	10407	451	10459	501	10510	551	10564
302	10307	352	10357	402	10408	452	10460	502	10511	552	10565
303	10308	353	10358	403	10409	453	10461	503	10512	553	10566
304	10309	354	10359	404	10410	454	10462	504	10513	554	10567
305	10310	355	10360	405	10411	455	10463	505	10514	555	10569
306	10311	356	10361	406	10412	456	10464	506	10515	556	10572
307	10312	357	10362	407	10413	457	10465	507	10516	557	10573
308	10313	358	10363	408	10414	458	10466	508	10517	558	10574
309	10314	359	10364	409	10415	459	10467	509	10518	559	10575
310	10315	360	10365	410	10416	460	10468	510	10519	560	10576
311	10316	361	10366	411	10417	461	10469	511	10520	561	10577
312	10317	362	10367	412	10418	462	10470	512	10521	562	10578
313	10318	363	10369	413	10420	463	10471	513	10522	563	10580
314	10319	364	10370	414	10421	464	10472	514	10523	564	10582
315	10320	365	10371	415	10422	465	10473	515	10524	565	10584
316	10321	366	10372	416	10423	466	10474	516	10525	566	10585
317	10322	367	10373	417	10424	467	10475	517	10526	567	10587
318	10323	368	10374	418	10425	468	10476	518	10527	568	10588
319	10324	369	10375	419	10427	469	10477	519	10528	569	10590
320	10325	370	10376	420	10428	470	10478	520	10529	570	10591
321	10326	371	10377	421	10429	471	10479	521	10530	571	10592
322	10327	372	10378	422	10430	472	10480	522	10531	572	10593
323	10328	373	10379	423	10431	473	10481	523	10532	573	10595
324	10329	374	10380	424	10432	474	10482	524	10533	574	10597
325	10330	375	10381	425	10433	475	10483	525	10534	575	10599
326	10331	376	10382	426	10434	476	10484	526	10535	576	10600
327	10332	377	10383	427	10435	477	10485	527	10536	577	10601
328	10333	378	10384	428	10436	478	10486	528	10537	578	10603
329	10334	379	10385	429	10437	479	10487	529	10538	579	10605
330	10335	380	10386	430	10438	480	10488	530	10539	580	10606
331	10336	381	10387	431	10439	481	10489	531	10540	581	10609
332	10337	382	10388	432	10440	482	10490	532	10541	582	10610
333	10338	383	10389	433	10441	483	10491	533	10542	583	10612
334	10339	384	10390	434	10442	484	10492	534	10543	584	10613
335	10340	385	10391	435	10443	485	10493	535	10544	585	10615
336	10341	386	10392	436	10444	486	10494	536	10546	586	10618
337	10342	387	10393	437	10445	487	10495	537	10547	587	10619
338	10343	388	10394	438	10446	488	10497	538	10548	588	10620
339	10344	389	10395	439	10447	489	10498	539	10549	589	10621
340	10345	390	10396	440	10448	490	10499	540	10550	590	10622
341	10346	391	10397	441	10449	491	10500	541	10551	591	10623
342	10347	392	10398	442	10450	492	10501	542	10552	592	10624
343	10348	393	10399	443	10451	493	10502	543	10553	593	10625
344	10349	394	10400	444	10452	494	10503	544	10554	594	10626
345	10350	395	10401	445	10453	495	10504	545	10555	595	10627
346	10351	396	10402	446	10454	496	10505	546	10557	596	10628
347	10352	397	10403	447	10455	497	10506	547	10559	597	10629
348	10353	398	10404	448	10456	498	10507	548	10560	598	10630
349	10354	399	10405	449	10457	499	10508	549	10562	599	10631
350	10355	400	10406	450	10458	500	10509	550	10563	600	10632

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
601	10633	651	10702	701	10766	751	10825	801	10882	851	10943
602	10634	652	10704	702	10767	752	10827	802	10883	852	10946
603	10636	653	10705	703	10769	753	10828	803	10884	853	10947
604	10637	654	10706	704	10770	754	10829	804	10885	854	10948
605	10638	655	10707	705	10771	755	10830	805	10886	855	10949
606	10639	656	10708	706	10774	756	10831	806	10888	856	10950
607	10640	657	10709	707	10775	757	10832	807	10889	857	10951
608	10641	658	10710	708	10776	758	10833	808	10890	858	10952
609	10643	659	10711	709	10777	759	10834	809	10891	859	10953
610	10644	660	10713	710	10778	760	10835	810	10893	860	10954
611	10645	661	10714	711	10779	761	10837	811	10894	861	10955
612	10646	662	10715	712	10781	762	10838	812	10895	862	10956
613	10647	663	10717	713	10783	763	10840	813	10896	863	10957
614	10648	664	10718	714	10784	764	10841	814	10897	864	10958
615	10651	665	10719	715	10785	765	10842	815	10898	865	10962
616	10652	666	10723	716	10788	766	10843	816	10899	866	10963
617	10653	667	10724	717	10789	767	10846	817	10900	867	10964
618	10654	668	10725	718	10790	768	10847	818	10901	868	10965
619	10655	669	10726	719	10791	769	10848	819	10902	869	10967
620	10657	670	10727	720	10792	770	10849	820	10903	870	10969
621	10659	671	10728	721	10793	771	10850	821	10905	871	10970
622	10661	672	10729	722	10794	772	10851	822	10906	872	10971
623	10662	673	10730	723	10796	773	10852	823	10907	873	10972
624	10663	674	10731	724	10798	774	10853	824	10908	874	10973
625	10664	675	10732	725	10799	775	10856	825	10910	875	10975
626	10666	676	10733	726	10800	776	10857	826	10911	876	10976
627	10667	677	10734	727	10801	777	10858	827	10912	877	10977
628	10670	678	10735	728	10802	778	10859	828	10913	878	10978
629	10671	679	10736	729	10803	779	10860	829	10914	879	10979
630	10675	680	10738	730	10804	780	10861	830	10915	880	10981
631	10676	681	10739	731	10805	781	10862	831	10916	881	10982
632	10677	682	10741	732	10806	782	10863	832	10917	882	10983
633	10678	683	10742	733	10807	783	10864	833	10919	883	10984
634	10679	684	10743	734	10808	784	10865	834	10921	884	10985
635	10680	685	10744	735	10809	785	10866	835	10922	885	10986
636	10682	686	10745	736	10810	786	10867	836	10923	886	10988
637	10683	687	10746	737	10811	787	10868	837	10925	887	10989
638	10684	688	10747	738	10812	788	10869	838	10927	888	10992
639	10685	689	10748	739	10813	789	10870	839	10928	889	10993
640	10686	690	10749	740	10814	790	10871	840	10929	890	10996
641	10687	691	10750	741	10815	791	10872	841	10931	891	10997
642	10689	692	10751	742	10816	792	10873	842	10932	892	10998
643	10690	693	10752	743	10817	793	10874	843	10934	893	10999
644	10691	694	10754	744	10818	794	10875	844	10935	894	11000
645	10694	695	10759	745	10819	795	10876	845	10936	895	11001
646	10695	696	10760	746	10820	796	10877	846	10938	896	11002
647	10696	697	10761	747	10821	797	10878	847	10939	897	11003
648	10697	698	10762	748	10822	798	10879	848	10940	898	11004
649	10698	699	10763	749	10823	799	10880	849	10941	899	11005
650	10699	700	10765	750	10824	800	10881	850	10942	900	11006

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
901	11007	951	11066	1001	11122	1051	11183	1101	11245	1151	11301
902	11008	952	11067	1002	11123	1052	11184	1102	11247	1152	11302
903	11009	953	11068	1003	11125	1053	11186	1103	11248	1153	11303
904	11010	954	11069	1004	11126	1054	11187	1104	11249	1154	11304
905	11011	955	11070	1005	11127	1055	11188	1105	11250	1155	11305
906	11012	956	11071	1006	11128	1056	11189	1106	11251	1156	11306
907	11013	957	11072	1007	11130	1057	11190	1107	11252	1157	11307
908	11016	958	11073	1008	11133	1058	11191	1108	11253	1158	11308
909	11017	959	11074	1009	11134	1059	11192	1109	11254	1159	11309
910	11018	960	11075	1010	11136	1060	11193	1110	11255	1160	11310
911	11019	961	11077	1011	11137	1061	11194	1111	11257	1161	11311
912	11020	962	11078	1012	11138	1062	11195	1112	11258	1162	11312
913	11021	963	11080	1013	11139	1063	11196	1113	11260	1163	11313
914	11022	964	11081	1014	11140	1064	11199	1114	11261	1164	11314
915	11023	965	11083	1015	11141	1065	11200	1115	11263	1165	11315
916	11024	966	11085	1016	11142	1066	11201	1116	11264	1166	11316
917	11025	967	11086	1017	11143	1067	11202	1117	11265	1167	11317
918	11026	968	11087	1018	11144	1068	11203	1118	11266	1168	11318
919	11027	969	11088	1019	11145	1069	11204	1119	11267	1169	11319
920	11028	970	11089	1020	11147	1070	11208	1120	11269	1170	11320
921	11029	971	11090	1021	11148	1071	11209	1121	11270	1171	11321
922	11031	972	11091	1022	11150	1072	11211	1122	11271	1172	11322
923	11032	973	11092	1023	11151	1073	11212	1123	11272	1173	11323
924	11033	974	11093	1024	11152	1074	11213	1124	11273	1174	11324
925	11034	975	11095	1025	11153	1075	11214	1125	11274	1175	11325
926	11035	976	11096	1026	11154	1076	11215	1126	11275	1176	11326
927	11036	977	11097	1027	11155	1077	11216	1127	11276	1177	11327
928	11037	978	11098	1028	11156	1078	11217	1128	11277	1178	11328
929	11039	979	11099	1029	11157	1079	11219	1129	11278	1179	11329
930	11040	980	11100	1030	11158	1080	11221	1130	11279	1180	11330
931	11041	981	11101	1031	11159	1081	11222	1131	11280	1181	11331
932	11042	982	11102	1032	11160	1082	11223	1132	11281	1182	11332
933	11043	983	11104	1033	11161	1083	11224	1133	11282	1183	11333
934	11044	984	11105	1034	11162	1084	11225	1134	11283	1184	11334
935	11045	985	11106	1035	11163	1085	11226	1135	11284	1185	11335
936	11046	986	11107	1036	11164	1086	11227	1136	11286	1186	11336
937	11047	987	11108	1037	11166	1087	11229	1137	11287	1187	11338
938	11050	988	11109	1038	11167	1088	11230	1138	11288	1188	11339
939	11052	989	11110	1039	11168	1089	11231	1139	11289	1189	11340
940	11053	990	11111	1040	11169	1090	11233	1140	11290	1190	11341
941	11054	991	11112	1041	11170	1091	11234	1141	11291	1191	11342
942	11055	992	11113	1042	11171	1092	11236	1142	11292	1192	11343
943	11057	993	11114	1043	11172	1093	11237	1143	11293	1193	11344
944	11058	994	11115	1044	11174	1094	11238	1144	11294	1194	11345
945	11059	995	11116	1045	11175	1095	11239	1145	11295	1195	11346
946	11060	996	11117	1046	11177	1096	11240	1146	11296	1196	11348
947	11061	997	11118	1047	11178	1097	11241	1147	11297	1197	11349
948	11062	998	11119	1048	11179	1098	11242	1148	11298	1198	11350
949	11063	999	11120	1049	11180	1099	11243	1149	11299	1199	11351
950	11064	1000	11121	1050	11181	1100	11244	1150	11300	1200	11352

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1201	11353	1251	11408	1301	11462	1351	11513	1401	11565	1451	11626
1202	11354	1252	11409	1302	11463	1352	11514	1402	11566	1452	11627
1203	11355	1253	11410	1303	11464	1353	11515	1403	11567	1453	11628
1204	11356	1254	11411	1304	11465	1354	11516	1404	11568	1454	11629
1205	11357	1255	11412	1305	11466	1355	11517	1405	11569	1455	11630
1206	11359	1256	11413	1306	11467	1356	11518	1406	11570	1456	11631
1207	11360	1257	11414	1307	11468	1357	11519	1407	11571	1457	11632
1208	11361	1258	11415	1308	11469	1358	11520	1408	11572	1458	11633
1209	11362	1259	11416	1309	11470	1359	11521	1409	11573	1459	11634
1210	11363	1260	11417	1310	11471	1360	11523	1410	11574	1460	11635
1211	11364	1261	11418	1311	11472	1361	11524	1411	11575	1461	11636
1212	11365	1262	11420	1312	11473	1362	11525	1412	11576	1462	11638
1213	11366	1263	11421	1313	11474	1363	11526	1413	11577	1463	11639
1214	11367	1264	11422	1314	11475	1364	11527	1414	11578	1464	11640
1215	11368	1265	11423	1315	11476	1365	11528	1415	11579	1465	11641
1216	11369	1266	11424	1316	11477	1366	11529	1416	11580	1466	11643
1217	11370	1267	11425	1317	11478	1367	11530	1417	11582	1467	11644
1218	11371	1268	11426	1318	11479	1368	11531	1418	11583	1468	11646
1219	11372	1269	11427	1319	11480	1369	11532	1419	11584	1469	11647
1220	11373	1270	11428	1320	11481	1370	11533	1420	11585	1470	11648
1221	11374	1271	11429	1321	11483	1371	11534	1421	11587	1471	11650
1222	11375	1272	11430	1322	11484	1372	11535	1422	11588	1472	11651
1223	11376	1273	11431	1323	11485	1373	11536	1423	11589	1473	11652
1224	11377	1274	11432	1324	11486	1374	11537	1424	11590	1474	11654
1225	11378	1275	11433	1325	11487	1375	11539	1425	11591	1475	11655
1226	11379	1276	11434	1326	11488	1376	11540	1426	11592	1476	11656
1227	11380	1277	11435	1327	11489	1377	11541	1427	11593	1477	11657
1228	11381	1278	11436	1328	11490	1378	11542	1428	11594	1478	11658
1229	11382	1279	11437	1329	11491	1379	11543	1429	11595	1479	11659
1230	11383	1280	11438	1330	11492	1380	11544	1430	11596	1480	11660
1231	11384	1281	11440	1331	11493	1381	11545	1431	11600	1481	11661
1232	11385	1282	11441	1332	11494	1382	11546	1432	11601	1482	11662
1233	11386	1283	11442	1333	11495	1383	11547	1433	11602	1483	11663
1234	11387	1284	11443	1334	11496	1384	11548	1434	11603	1484	11664
1235	11388	1285	11444	1335	11497	1385	11549	1435	11605	1485	11666
1236	11389	1286	11445	1336	11498	1386	11550	1436	11606	1486	11667
1237	11390	1287	11446	1337	11499	1387	11551	1437	11607	1487	11668
1238	11392	1288	11447	1338	11500	1388	11552	1438	11608	1488	11669
1239	11393	1289	11448	1339	11501	1389	11553	1439	11609	1489	11670
1240	11394	1290	11449	1340	11502	1390	11554	1440	11610	1490	11671
1241	11395	1291	11451	1341	11503	1391	11555	1441	11612	1491	11672
1242	11397	1292	11452	1342	11504	1392	11556	1442	11613	1492	11674
1243	11398	1293	11453	1343	11505	1393	11557	1443	11614	1493	11675
1244	11399	1294	11454	1344	11506	1394	11558	1444	11617	1494	11676
1245	11400	1295	11455	1345	11507	1395	11559	1445	11618	1495	11677
1246	11403	1296	11456	1346	11508	1396	11560	1446	11620	1496	11678
1247	11404	1297	11457	1347	11509	1397	11561	1447	11621	1497	11679
1248	11405	1298	11459	1348	11510	1398	11562	1448	11622	1498	11682
1249	11406	1299	11460	1349	11511	1399	11563	1449	11623	1499	11683
1250	11407	1300	11461	1350	11512	1400	11564	1450	11624	1500	11684

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1501	11685	1551	11739	1601	11801	1651	11860	1701	11924	1751	11997
1502	11686	1552	11741	1602	11802	1652	11862	1702	11925	1752	11999
1503	11687	1553	11742	1603	11803	1653	11863	1703	11926	1753	12001
1504	11689	1554	11743	1604	11804	1654	11864	1704	11929	1754	12002
1505	11690	1555	11744	1605	11805	1655	11865	1705	11930	1755	12003
1506	11691	1556	11745	1606	11806	1656	11866	1706	11932	1756	12005
1507	11692	1557	11746	1607	11807	1657	11867	1707	11933	1757	12006
1508	11693	1558	11748	1608	11808	1658	11869	1708	11934	1758	12007
1509	11694	1559	11750	1609	11809	1659	11870	1709	11935	1759	12008
1510	11695	1560	11751	1610	11811	1660	11871	1710	11936	1760	12009
1511	11696	1561	11752	1611	11814	1661	11872	1711	11938	1761	12010
1512	11697	1562	11753	1612	11815	1662	11874	1712	11939	1762	12011
1513	11698	1563	11755	1613	11816	1663	11875	1713	11940	1763	12012
1514	11699	1564	11756	1614	11817	1664	11876	1714	11941	1764	12014
1515	11700	1565	11757	1615	11818	1665	11877	1715	11943	1765	12015
1516	11702	1566	11758	1616	11819	1666	11878	1716	11944	1766	12017
1517	11703	1567	11759	1617	11820	1667	11879	1717	11946	1767	12018
1518	11704	1568	11760	1618	11821	1668	11880	1718	11947	1768	12019
1519	11705	1569	11761	1619	11822	1669	11881	1719	11950	1769	12020
1520	11706	1570	11762	1620	11823	1670	11882	1720	11952	1770	12021
1521	11707	1571	11763	1621	11824	1671	11883	1721	11953	1771	12022
1522	11709	1572	11764	1622	11825	1672	11884	1722	11954	1772	12023
1523	11710	1573	11765	1623	11826	1673	11885	1723	11955	1773	12025
1524	11711	1574	11766	1624	11828	1674	11886	1724	11956	1774	12026
1525	11713	1575	11767	1625	11830	1675	11887	1725	11957	1775	12030
1526	11714	1576	11768	1626	11831	1676	11888	1726	11958	1776	12031
1527	11715	1577	11769	1627	11832	1677	11889	1727	11959	1777	12033
1528	11716	1578	11772	1628	11833	1678	11890	1728	11960	1778	12034
1529	11717	1579	11773	1629	11834	1679	11892	1729	11962	1779	12035
1530	11718	1580	11774	1630	11835	1680	11893	1730	11963	1780	12038
1531	11719	1581	11775	1631	11837	1681	11894	1731	11964	1781	12039
1532	11720	1582	11777	1632	11838	1682	11895	1732	11966	1782	12040
1533	11721	1583	11778	1633	11839	1683	11896	1733	11967	1783	12041
1534	11722	1584	11779	1634	11841	1684	11898	1734	11968	1784	12043
1535	11723	1585	11781	1635	11842	1685	11901	1735	11970	1785	12044
1536	11724	1586	11782	1636	11843	1686	11902	1736	11973	1786	12045
1537	11725	1587	11783	1637	11844	1687	11903	1737	11974	1787	12047
1538	11726	1588	11784	1638	11845	1688	11904	1738	11975	1788	12049
1539	11727	1589	11785	1639	11846	1689	11906	1739	11979	1789	12050
1540	11728	1590	11787	1640	11848	1690	11911	1740	11980	1790	12051
1541	11729	1591	11789	1641	11849	1691	11912	1741	11981	1791	12052
1542	11730	1592	11790	1642	11850	1692	11913	1742	11982	1792	12053
1543	11731	1593	11791	1643	11851	1693	11914	1743	11983	1793	12054
1544	11732	1594	11792	1644	11852	1694	11915	1744	11984	1794	12055
1545	11733	1595	11793	1645	11853	1695	11916	1745	11985	1795	12056
1546	11734	1596	11795	1646	11854	1696	11917	1746	11986	1796	12057
1547	11735	1597	11796	1647	11855	1697	11919	1747	11987	1797	12058
1548	11736	1598	11797	1648	11856	1698	11920	1748	11989	1798	12059
1549	11737	1599	11798	1649	11857	1699	11921	1749	11991	1799	12060
1550	11738	1600	11799	1650	11858	1700	11923	1750	11995	1800	12061

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1801	12062	1851	12118	1901	12171	1951	12231	2001	12293	2051	12350
1802	12063	1852	12119	1902	12172	1952	12232	2002	12295	2052	12351
1803	12064	1853	12120	1903	12173	1953	12233	2003	12297	2053	12352
1804	12065	1854	12121	1904	12174	1954	12234	2004	12299	2054	12354
1805	12066	1855	12122	1905	12175	1955	12235	2005	12300	2055	12355
1806	12067	1856	12123	1906	12176	1956	12237	2006	12301	2056	12356
1807	12068	1857	12124	1907	12177	1957	12239	2007	12302	2057	12357
1808	12069	1858	12125	1908	12178	1958	12240	2008	12304	2058	12358
1809	12070	1859	12126	1909	12179	1959	12241	2009	12305	(2058)	
1810	12071	1860	12127	1910	12180	1960	12243	2010	12306		
1811	12072	1861	12128	1911	12181	1961	12244	2011	12307		
1812	12073	1862	12129	1912	12182	1962	12247	2012	12308		
1813	12074	1863	12130	1913	12183	1963	12249	2013	12309		
1814	12075	1864	12131	1914	12184	1964	12250	2014	12310		
1815	12076	1865	12132	1915	12185	1965	12251	2015	12311		
1816	12079	1866	12133	1916	12186	1966	12252	2016	12312		
1817	12080	1867	12134	1917	12188	1967	12253	2017	12313		
1818	12082	1868	12135	1918	12189	1968	12254	2018	12314		
1819	12083	1869	12136	1919	12190	1969	12255	2019	12315		
1820	12084	1870	12137	1920	12191	1970	12256	2020	12316		
1821	12085	1871	12138	1921	12192	1971	12257	2021	12317		
1822	12086	1872	12139	1922	12193	1972	12260	2022	12318		
1823	12087	1873	12140	1923	12195	1973	12263	2023	12319		
1824	12088	1874	12141	1924	12196	1974	12265	2024	12320		
1825	12089	1875	12142	1925	12197	1975	12266	2025	12321		
1826	12090	1876	12143	1926	12198	1976	12267	2026	12322		
1827	12092	1877	12144	1927	12199	1977	12268	2027	12324		
1828	12093	1878	12145	1928	12201	1978	12269	2028	12325		
1829	12094	1879	12146	1929	12202	1979	12270	2029	12326		
1830	12095	1880	12147	1930	12203	1980	12271	2030	12327		
1831	12096	1881	12148	1931	12205	1981	12273	2031	12328		
1832	12097	1882	12150	1932	12206	1982	12274	2032	12329		
1833	12098	1883	12151	1933	12207	1983	12275	2033	12330		
1834	12100	1884	12152	1934	12209	1984	12276	2034	12331		
1835	12101	1885	12153	1935	12210	1985	12277	2035	12332		
1836	12102	1886	12154	1936	12211	1986	12278	2036	12333		
1837	12103	1887	12155	1937	12212	1987	12279	2037	12334		
1838	12104	1888	12156	1938	12214	1988	12280	2038	12335		
1839	12105	1889	12157	1939	12215	1989	12281	2039	12336		
1840	12106	1890	12158	1940	12217	1990	12282	2040	12339		
1841	12108	1891	12159	1941	12219	1991	12283	2041	12340		
1842	12109	1892	12160	1942	12221	1992	12284	2042	12341		
1843	12110	1893	12161	1943	12222	1993	12285	2043	12342		
1844	12111	1894	12162	1944	12223	1994	12286	2044	12343		
1845	12112	1895	12163	1945	12224	1995	12287	2045	12344		
1846	12113	1896	12166	1946	12225	1996	12288	2046	12345		
1847	12114	1897	12167	1947	12226	1997	12289	2047	12346		
1848	12115	1898	12168	1948	12227	1998	12290	2048	12347		
1849	12116	1899	12169	1949	12228	1999	12291	2049	12348		
1850	12117	1900	12170	1950	12229	2000	12292	2050	12349		

■ U56-5

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1	10003	51	10055	101	10105	151	10155	201	10206	251	10256
2	10004	52	10056	102	10106	152	10156	202	10207	252	10257
3	10007	53	10057	103	10107	153	10157	203	10208	253	10258
4	10008	54	10058	104	10108	154	10158	204	10209	254	10259
5	10009	55	10059	105	10109	155	10159	205	10210	255	10261
6	10010	56	10060	106	10110	156	10160	206	10211	256	10262
7	10011	57	10061	107	10111	157	10161	207	10212	257	10263
8	10012	58	10062	108	10112	158	10162	208	10213	258	10264
9	10013	59	10063	109	10113	159	10163	209	10214	259	10265
10	10014	60	10064	110	10114	160	10164	210	10215	260	10266
11	10015	61	10065	111	10115	161	10166	211	10216	261	10267
12	10016	62	10066	112	10116	162	10167	212	10217	262	10268
13	10017	63	10067	113	10117	163	10168	213	10218	263	10269
14	10018	64	10068	114	10118	164	10169	214	10219	264	10270
15	10019	65	10069	115	10119	165	10170	215	10220	265	10271
16	10020	66	10070	116	10120	166	10171	216	10221	266	10272
17	10021	67	10071	117	10121	167	10172	217	10222	267	10273
18	10022	68	10072	118	10122	168	10173	218	10223	268	10274
19	10023	69	10073	119	10123	169	10174	219	10224	269	10275
20	10024	70	10074	120	10124	170	10175	220	10225	270	10276
21	10025	71	10075	121	10125	171	10176	221	10226	271	10277
22	10026	72	10076	122	10126	172	10177	222	10227	272	10278
23	10027	73	10077	123	10127	173	10178	223	10228	273	10279
24	10028	74	10078	124	10128	174	10179	224	10229	274	10280
25	10029	75	10079	125	10129	175	10180	225	10230	275	10281
26	10030	76	10080	126	10130	176	10181	226	10231	276	10282
27	10031	77	10081	127	10131	177	10182	227	10232	277	10283
28	10032	78	10082	128	10132	178	10183	228	10233	278	10284
29	10033	79	10083	129	10133	179	10184	229	10234	279	10285
30	10034	80	10084	130	10134	180	10185	230	10235	280	10286
31	10035	81	10085	131	10135	181	10186	231	10236	281	10287
32	10036	82	10086	132	10136	182	10187	232	10237	282	10288
33	10037	83	10087	133	10137	183	10188	233	10238	283	10289
34	10038	84	10088	134	10138	184	10189	234	10239	284	10290
35	10039	85	10089	135	10139	185	10190	235	10240	285	10291
36	10040	86	10090	136	10140	186	10191	236	10241	286	10292
37	10041	87	10091	137	10141	187	10192	237	10242	287	10293
38	10042	88	10092	138	10142	188	10193	238	10243	288	10294
39	10043	89	10093	139	10143	189	10194	239	10244	289	10295
40	10044	90	10094	140	10144	190	10195	240	10245	290	10296
41	10045	91	10095	141	10145	191	10196	241	10246	291	10297
42	10046	92	10096	142	10146	192	10197	242	10247	292	10298
43	10047	93	10097	143	10147	193	10198	243	10248	293	10299
44	10048	94	10098	144	10148	194	10199	244	10249	294	10300
45	10049	95	10099	145	10149	195	10200	245	10250	295	10301
46	10050	96	10100	146	10150	196	10201	246	10251	296	10302
47	10051	97	10101	147	10151	197	10202	247	10252	297	10303
48	10052	98	10102	148	10152	198	10203	248	10253	298	10304
49	10053	99	10103	149	10153	199	10204	249	10254	299	10305
50	10054	100	10104	150	10154	200	10205	250	10255	300	10306

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
301	10307	351	10357	401	10407	451	10461	501	10512	551	10570
302	10308	352	10358	402	10408	452	10462	502	10513	552	10571
303	10309	353	10359	403	10409	453	10463	503	10514	553	10572
304	10310	354	10360	404	10410	454	10464	504	10515	554	10573
305	10311	355	10361	405	10411	455	10465	505	10516	555	10574
306	10312	356	10362	406	10412	456	10466	506	10517	556	10575
307	10313	357	10363	407	10414	457	10467	507	10519	557	10576
308	10314	358	10364	408	10415	458	10468	508	10521	558	10577
309	10315	359	10365	409	10416	459	10469	509	10522	559	10578
310	10316	360	10366	410	10417	460	10470	510	10523	560	10579
311	10317	361	10367	411	10418	461	10471	511	10524	561	10581
312	10318	362	10368	412	10419	462	10472	512	10525	562	10583
313	10319	363	10369	413	10420	463	10473	513	10526	563	10584
314	10320	364	10370	414	10421	464	10474	514	10527	564	10585
315	10321	365	10371	415	10422	465	10475	515	10529	565	10586
316	10322	366	10372	416	10423	466	10476	516	10530	566	10587
317	10323	367	10373	417	10424	467	10477	517	10531	567	10588
318	10324	368	10374	418	10425	468	10478	518	10532	568	10589
319	10325	369	10375	419	10426	469	10479	519	10534	569	10590
320	10326	370	10376	420	10427	470	10480	520	10535	570	10591
321	10327	371	10377	421	10428	471	10481	521	10536	571	10592
322	10328	372	10378	422	10429	472	10482	522	10537	572	10594
323	10329	373	10379	423	10430	473	10483	523	10538	573	10596
324	10330	374	10380	424	10431	474	10484	524	10540	574	10597
325	10331	375	10381	425	10433	475	10485	525	10541	575	10598
326	10332	376	10382	426	10434	476	10486	526	10542	576	10599
327	10333	377	10383	427	10435	477	10487	527	10543	577	10600
328	10334	378	10384	428	10436	478	10488	528	10544	578	10601
329	10335	379	10385	429	10437	479	10489	529	10545	579	10604
330	10336	380	10386	430	10438	480	10490	530	10546	580	10605
331	10337	381	10387	431	10439	481	10491	531	10547	581	10606
332	10338	382	10388	432	10440	482	10492	532	10548	582	10607
333	10339	383	10389	433	10441	483	10493	533	10549	583	10608
334	10340	384	10390	434	10442	484	10494	534	10550	584	10609
335	10341	385	10391	435	10443	485	10495	535	10552	585	10610
336	10342	386	10392	436	10445	486	10496	536	10553	586	10611
337	10343	387	10393	437	10446	487	10497	537	10554	587	10612
338	10344	388	10394	438	10447	488	10498	538	10555	588	10613
339	10345	389	10395	439	10448	489	10499	539	10556	589	10614
340	10346	390	10396	440	10449	490	10500	540	10558	590	10615
341	10347	391	10397	441	10450	491	10501	541	10559	591	10616
342	10348	392	10398	442	10452	492	10502	542	10560	592	10617
343	10349	393	10399	443	10453	493	10503	543	10561	593	10618
344	10350	394	10400	444	10454	494	10505	544	10562	594	10621
345	10351	395	10401	445	10455	495	10506	545	10563	595	10622
346	10352	396	10402	446	10456	496	10507	546	10564	596	10623
347	10353	397	10403	447	10457	497	10508	547	10565	597	10624
348	10354	398	10404	448	10458	498	10509	548	10567	598	10625
349	10355	399	10405	449	10459	499	10510	549	10568	599	10626
350	10356	400	10406	450	10460	500	10511	550	10569	600	10627

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
601	10629	651	10689	701	10746	751	10802	801	10857	851	10917
602	10630	652	10690	702	10747	752	10803	802	10858	852	10918
603	10631	653	10691	703	10748	753	10804	803	10859	853	10919
604	10632	654	10692	704	10749	754	10805	804	10860	854	10920
605	10634	655	10693	705	10750	755	10807	805	10862	855	10921
606	10635	656	10694	706	10751	756	10809	806	10863	856	10922
607	10636	657	10695	707	10752	757	10810	807	10864	857	10923
608	10637	658	10696	708	10753	758	10811	808	10865	858	10924
609	10638	659	10697	709	10754	759	10812	809	10866	859	10925
610	10640	660	10698	710	10755	760	10813	810	10867	860	10926
611	10641	661	10699	711	10756	761	10814	811	10868	861	10927
612	10642	662	10700	712	10757	762	10815	812	10869	862	10928
613	10643	663	10701	713	10758	763	10816	813	10871	863	10930
614	10644	664	10702	714	10759	764	10818	814	10872	864	10931
615	10645	665	10704	715	10760	765	10819	815	10873	865	10932
616	10646	666	10705	716	10762	766	10821	816	10874	866	10933
617	10647	667	10706	717	10763	767	10822	817	10875	867	10935
618	10648	668	10707	718	10764	768	10823	818	10876	868	10936
619	10649	669	10709	719	10765	769	10824	819	10877	869	10937
620	10650	670	10710	720	10766	770	10825	820	10878	870	10938
621	10651	671	10711	721	10767	771	10826	821	10879	871	10939
622	10653	672	10712	722	10768	772	10827	822	10880	872	10940
623	10654	673	10714	723	10769	773	10828	823	10882	873	10941
624	10655	674	10715	724	10770	774	10829	824	10883	874	10942
625	10656	675	10718	725	10771	775	10830	825	10884	875	10943
626	10657	676	10719	726	10772	776	10831	826	10885	876	10944
627	10658	677	10721	727	10775	777	10832	827	10886	877	10945
628	10659	678	10722	728	10776	778	10833	828	10887	878	10946
629	10660	679	10723	729	10777	779	10834	829	10888	879	10947
630	10661	680	10724	730	10778	780	10835	830	10889	880	10948
631	10662	681	10725	731	10780	781	10836	831	10890	881	10949
632	10663	682	10726	732	10781	782	10837	832	10891	882	10950
633	10664	683	10727	733	10782	783	10838	833	10893	883	10951
634	10665	684	10728	734	10783	784	10839	834	10894	884	10952
635	10667	685	10729	735	10785	785	10840	835	10896	885	10953
636	10668	686	10730	736	10786	786	10841	836	10897	886	10954
637	10669	687	10731	737	10787	787	10842	837	10898	887	10955
638	10671	688	10732	738	10788	788	10843	838	10899	888	10956
639	10672	689	10733	739	10790	789	10844	839	10900	889	10957
640	10674	690	10734	740	10791	790	10845	840	10901	890	10958
641	10675	691	10735	741	10792	791	10846	841	10902	891	10959
642	10676	692	10736	742	10793	792	10847	842	10904	892	10960
643	10677	693	10737	743	10794	793	10848	843	10906	893	10961
644	10678	694	10738	744	10795	794	10849	844	10908	894	10962
645	10680	695	10739	745	10796	795	10850	845	10910	895	10963
646	10681	696	10740	746	10797	796	10851	846	10911	896	10964
647	10683	697	10742	747	10798	797	10852	847	10912	897	10966
648	10685	698	10743	748	10799	798	10853	848	10913	898	10968
649	10686	699	10744	749	10800	799	10855	849	10915	899	10970
650	10688	700	10745	750	10801	800	10856	850	10916	900	10971

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
901	10972	951	11028	1001	11091	1051	11145	1101	11202	1151	11256
902	10973	952	11029	1002	11094	1052	11146	1102	11203	1152	11257
903	10974	953	11030	1003	11095	1053	11147	1103	11204	1153	11258
904	10975	954	11031	1004	11096	1054	11148	1104	11205	1154	11259
905	10977	955	11032	1005	11097	1055	11150	1105	11206	1155	11260
906	10979	956	11033	1006	11098	1056	11151	1106	11207	1156	11261
907	10980	957	11034	1007	11099	1057	11153	1107	11208	1157	11262
908	10981	958	11036	1008	11100	1058	11154	1108	11209	1158	11263
909	10982	959	11038	1009	11102	1059	11155	1109	11210	1159	11264
910	10983	960	11039	1010	11103	1060	11156	1110	11211	1160	11265
911	10984	961	11040	1011	11104	1061	11157	1111	11212	1161	11266
912	10985	962	11042	1012	11105	1062	11158	1112	11213	1162	11267
913	10986	963	11043	1013	11106	1063	11160	1113	11214	1163	11268
914	10987	964	11044	1014	11107	1064	11161	1114	11215	1164	11269
915	10988	965	11045	1015	11108	1065	11162	1115	11216	1165	11270
916	10989	966	11046	1016	11109	1066	11163	1116	11217	1166	11271
917	10991	967	11047	1017	11110	1067	11164	1117	11218	1167	11272
918	10992	968	11048	1018	11111	1068	11165	1118	11219	1168	11273
919	10993	969	11049	1019	11112	1069	11166	1119	11220	1169	11274
920	10995	970	11050	1020	11113	1070	11167	1120	11221	1170	11276
921	10996	971	11053	1021	11114	1071	11168	1121	11222	1171	11277
922	10997	972	11054	1022	11115	1072	11170	1122	11223	1172	11278
923	10998	973	11057	1023	11116	1073	11171	1123	11225	1173	11279
924	10999	974	11058	1024	11117	1074	11172	1124	11226	1174	11280
925	11001	975	11059	1025	11119	1075	11173	1125	11228	1175	11281
926	11002	976	11061	1026	11120	1076	11174	1126	11229	1176	11285
927	11003	977	11062	1027	11121	1077	11175	1127	11230	1177	11286
928	11004	978	11064	1028	11122	1078	11176	1128	11231	1178	11287
929	11005	979	11065	1029	11123	1079	11177	1129	11232	1179	11288
930	11006	980	11066	1030	11124	1080	11178	1130	11233	1180	11289
931	11007	981	11067	1031	11125	1081	11179	1131	11234	1181	11290
932	11008	982	11068	1032	11126	1082	11180	1132	11235	1182	11292
933	11009	983	11069	1033	11127	1083	11181	1133	11236	1183	11294
934	11010	984	11070	1034	11128	1084	11182	1134	11237	1184	11295
935	11011	985	11071	1035	11129	1085	11183	1135	11238	1185	11296
936	11012	986	11072	1036	11130	1086	11184	1136	11239	1186	11297
937	11013	987	11073	1037	11131	1087	11186	1137	11240	1187	11298
938	11014	988	11074	1038	11132	1088	11187	1138	11242	1188	11299
939	11015	989	11075	1039	11133	1089	11188	1139	11243	1189	11300
940	11016	990	11076	1040	11134	1090	11189	1140	11244	1190	11301
941	11017	991	11078	1041	11135	1091	11190	1141	11245	1191	11302
942	11018	992	11079	1042	11136	1092	11191	1142	11246	1192	11303
943	11019	993	11080	1043	11137	1093	11192	1143	11247	1193	11304
944	11020	994	11081	1044	11138	1094	11193	1144	11249	1194	11306
945	11021	995	11083	1045	11139	1095	11194	1145	11250	1195	11307
946	11022	996	11085	1046	11140	1096	11195	1146	11251	1196	11308
947	11023	997	11086	1047	11141	1097	11197	1147	11252	1197	11309
948	11025	998	11087	1048	11142	1098	11198	1148	11253	1198	11310
949	11026	999	11088	1049	11143	1099	11200	1149	11254	1199	11311
950	11027	1000	11089	1050	11144	1100	11201	1150	11255	1200	11312

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1201	11313	1251	11369	1301	11430	1351	11486	1401	11551	1451	11619
1202	11314	1252	11370	1302	11431	1352	11487	1402	11552	1452	11620
1203	11315	1253	11371	1303	11432	1353	11488	1403	11553	1453	11621
1204	11316	1254	11372	1304	11433	1354	11489	1404	11554	1454	11622
1205	11317	1255	11373	1305	11434	1355	11490	1405	11556	1455	11623
1206	11318	1256	11374	1306	11435	1356	11491	1406	11557	1456	11625
1207	11319	1257	11375	1307	11437	1357	11492	1407	11558	1457	11626
1208	11321	1258	11376	1308	11438	1358	11494	1408	11559	1458	11627
1209	11322	1259	11380	1309	11439	1359	11495	1409	11560	1459	11628
1210	11323	1260	11382	1310	11440	1360	11497	1410	11562	1460	11630
1211	11324	1261	11383	1311	11441	1361	11498	1411	11563	1461	11631
1212	11325	1262	11384	1312	11442	1362	11499	1412	11565	1462	11632
1213	11326	1263	11385	1313	11443	1363	11500	1413	11566	1463	11633
1214	11327	1264	11386	1314	11444	1364	11501	1414	11568	1464	11635
1215	11328	1265	11387	1315	11445	1365	11503	1415	11569	1465	11637
1216	11329	1266	11388	1316	11446	1366	11504	1416	11570	1466	11638
1217	11331	1267	11389	1317	11447	1367	11505	1417	11571	1467	11641
1218	11332	1268	11392	1318	11450	1368	11506	1418	11574	1468	11643
1219	11333	1269	11393	1319	11451	1369	11508	1419	11575	1469	11644
1220	11334	1270	11394	1320	11452	1370	11509	1420	11577	1470	11645
1221	11335	1271	11395	1321	11453	1371	11510	1421	11578	1471	11647
1222	11336	1272	11396	1322	11454	1372	11512	1422	11579	1472	11649
1223	11338	1273	11397	1323	11455	1373	11513	1423	11580	1473	11650
1224	11339	1274	11398	1324	11456	1374	11514	1424	11582	1474	11651
1225	11340	1275	11399	1325	11457	1375	11515	1425	11584	1475	11653
1226	11341	1276	11400	1326	11458	1376	11516	1426	11585	1476	11654
1227	11342	1277	11401	1327	11460	1377	11517	1427	11586	1477	11655
1228	11343	1278	11402	1328	11461	1378	11518	1428	11587	1478	11656
1229	11344	1279	11403	1329	11462	1379	11519	1429	11589	1479	11657
1230	11345	1280	11404	1330	11463	1380	11521	1430	11591	1480	11659
1231	11346	1281	11405	1331	11464	1381	11522	1431	11593	1481	11660
1232	11347	1282	11406	1332	11465	1382	11524	1432	11594	1482	11663
1233	11348	1283	11407	1333	11466	1383	11525	1433	11596	1483	11664
1234	11349	1284	11409	1334	11467	1384	11526	1434	11597	1484	11665
1235	11350	1285	11410	1335	11468	1385	11527	1435	11598	1485	11668
1236	11351	1286	11412	1336	11469	1386	11528	1436	11600	1486	11669
1237	11353	1287	11413	1337	11470	1387	11532	1437	11601	1487	11670
1238	11354	1288	11415	1338	11471	1388	11533	1438	11603	1488	11672
1239	11355	1289	11416	1339	11472	1389	11534	1439	11604	1489	11673
1240	11356	1290	11417	1340	11473	1390	11535	1440	11605	1490	11674
1241	11357	1291	11418	1341	11474	1391	11536	1441	11607	1491	11676
1242	11358	1292	11419	1342	11475	1392	11537	1442	11608	1492	11680
1243	11360	1293	11420	1343	11476	1393	11538	1443	11609	1493	11681
1244	11361	1294	11421	1344	11477	1394	11540	1444	11611	1494	11682
1245	11362	1295	11422	1345	11478	1395	11541	1445	11612	1495	11683
1246	11363	1296	11423	1346	11480	1396	11542	1446	11614	1496	11686
1247	11364	1297	11425	1347	11481	1397	11543	1447	11615	1497	11687
1248	11365	1298	11426	1348	11482	1398	11544	1448	11616	1498	11688
1249	11367	1299	11427	1349	11483	1399	11547	1449	11617	1499	11691
1250	11368	1300	11429	1350	11485	1400	11550	1450	11618	1500	11693

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1501	11694	1551	11749	1601	11809	1651	11873	1701	11932	1751	12004
1502	11695	1552	11750	1602	11810	1652	11874	1702	11933	1752	12005
1503	11696	1553	11751	1603	11811	1653	11875	1703	11934	1753	12006
1504	11697	1554	11752	1604	11812	1654	11876	1704	11935	1754	12008
1505	11699	1555	11753	1605	11813	1655	11877	1705	11938	1755	12010
1506	11700	1556	11754	1606	11814	1656	11878	1706	11940	1756	12014
1507	11701	1557	11756	1607	11815	1657	11880	1707	11941	1757	12015
1508	11702	1558	11757	1608	11816	1658	11881	1708	11942	1758	12016
1509	11703	1559	11758	1609	11817	1659	11882	1709	11944	1759	12018
1510	11704	1560	11759	1610	11818	1660	11883	1710	11945	1760	12021
1511	11705	1561	11761	1611	11819	1661	11884	1711	11948	1761	12022
1512	11706	1562	11762	1612	11820	1662	11885	1712	11949	1762	12023
1513	11707	1563	11764	1613	11821	1663	11886	1713	11950	1763	12024
1514	11708	1564	11765	1614	11822	1664	11887	1714	11951	1764	12026
1515	11709	1565	11766	1615	11823	1665	11888	1715	11953	1765	12027
1516	11710	1566	11767	1616	11825	1666	11889	1716	11954	1766	12028
1517	11713	1567	11769	1617	11826	1667	11890	1717	11955	1767	12030
1518	11714	1568	11770	1618	11827	1668	11891	1718	11956	1768	12031
1519	11715	1569	11771	1619	11828	1669	11892	1719	11960	1769	12032
1520	11716	1570	11772	1620	11829	1670	11893	1720	11962	1770	12033
1521	11717	1571	11775	1621	11831	1671	11894	1721	11963	1771	12034
1522	11718	1572	11776	1622	11832	1672	11895	1722	11964	1772	12035
1523	11719	1573	11777	1623	11835	1673	11896	1723	11965	1773	12036
1524	11720	1574	11778	1624	11836	1674	11897	1724	11968	1774	12037
1525	11721	1575	11779	1625	11837	1675	11898	1725	11969	1775	12038
1526	11722	1576	11780	1626	11838	1676	11899	1726	11970	1776	12039
1527	11723	1577	11781	1627	11840	1677	11900	1727	11971	1777	12040
1528	11725	1578	11782	1628	11841	1678	11901	1728	11972	1778	12041
1529	11726	1579	11783	1629	11842	1679	11903	1729	11973	1779	12042
1530	11727	1580	11784	1630	11844	1680	11904	1730	11975	1780	12043
1531	11728	1581	11786	1631	11845	1681	11908	1731	11977	1781	12044
1532	11729	1582	11787	1632	11846	1682	11910	1732	11978	1782	12045
1533	11730	1583	11788	1633	11847	1683	11911	1733	11979	1783	12046
1534	11732	1584	11789	1634	11848	1684	11912	1734	11980	1784	12049
1535	11733	1585	11790	1635	11849	1685	11913	1735	11982	1785	12050
1536	11734	1586	11791	1636	11850	1686	11914	1736	11983	1786	12051
1537	11735	1587	11792	1637	11852	1687	11915	1737	11984	1787	12053
1538	11736	1588	11793	1638	11854	1688	11916	1738	11985	1788	12054
1539	11737	1589	11795	1639	11855	1689	11917	1739	11986	1789	12055
1540	11738	1590	11796	1640	11856	1690	11918	1740	11987	1790	12056
1541	11739	1591	11798	1641	11858	1691	11919	1741	11988	1791	12058
1542	11740	1592	11799	1642	11859	1692	11921	1742	11989	1792	12059
1543	11741	1593	11800	1643	11860	1693	11922	1743	11990	1793	12062
1544	11742	1594	11801	1644	11862	1694	11923	1744	11992	1794	12063
1545	11743	1595	11802	1645	11863	1695	11924	1745	11996	1795	12064
1546	11744	1596	11803	1646	11864	1696	11925	1746	11997	1796	12065
1547	11745	1597	11804	1647	11866	1697	11926	1747	11999	1797	12066
1548	11746	1598	11805	1648	11869	1698	11928	1748	12000	1798	12067
1549	11747	1599	11806	1649	11871	1699	11929	1749	12001	1799	12068
1550	11748	1600	11807	1650	11872	1700	11930	1750	12002	1800	12069

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1801	12070	1851	12129	1901	12194	1951	12259
1802	12071	1852	12130	1902	12197	1952	12260
1803	12072	1853	12131	1903	12198	1953	12261
1804	12073	1854	12133	1904	12199	1954	12262
1805	12074	1855	12134	1905	12200	1955	12263
1806	12075	1856	12135	1906	12201	1956	12264
1807	12077	1857	12136	1907	12202	1957	12266
1808	12078	1858	12137	1908	12204	1958	12268
1809	12079	1859	12138	1909	12206	1959	12269
1810	12080	1860	12139	1910	12207	1960	12270
1811	12081	1861	12140	1911	12208	1961	12271
1812	12082	1862	12141	1912	12210	1962	12272
1813	12083	1863	12142	1913	12211	1963	12273
1814	12084	1864	12143	1914	12215	1964	12274
1815	12085	1865	12145	1915	12216	1965	12275
1816	12086	1866	12148	1916	12217	1966	12276
1817	12087	1867	12149	1917	12218	1967	12277
1818	12089	1868	12150	1918	12219	1968	12278
1819	12090	1869	12151	1919	12220	1969	12279
1820	12091	1870	12153	1920	12221	1970	12280
1821	12093	1871	12154	1921	12223	1971	12281
1822	12096	1872	12155	1922	12224	1972	12282
1823	12097	1873	12156	1923	12225	1973	12283
1824	12100	1874	12158	1924	12226	1974	12284
1825	12101	1875	12159	1925	12227	1975	12285
1826	12102	1876	12160	1926	12229	1976	12286
1827	12103	1877	12161	1927	12230	1977	12287
1828	12104	1878	12162	1928	12231	1978	12288
1829	12105	1879	12163	1929	12232	1979	12289
1830	12106	1880	12164	1930	12233	1980	12290
1831	12107	1881	12166	1931	12234	1981	12291
1832	12108	1882	12167	1932	12235	1982	12292
1833	12109	1883	12168	1933	12237	1983	12293
1834	12110	1884	12169	1934	12238	1984	12294
1835	12111	1885	12170	1935	12239	1985	12295
1836	12112	1886	12171	1936	12240	1986	12296
1837	12114	1887	12174	1937	12243	1987	12297
1838	12115	1888	12177	1938	12244	1988	12298
1839	12116	1889	12178	1939	12245	1989	12299
1840	12117	1890	12179	1940	12247	1990	12300
1841	12118	1891	12182	1941	12248	1991	12301
1842	12119	1892	12183	1942	12249	1992	12302
1843	12120	1893	12184	1943	12250	1993	12303
1844	12121	1894	12185	1944	12251	1994	12304
1845	12122	1895	12187	1945	12253	1995	12305
1846	12123	1896	12188	1946	12254	1996	12306
1847	12125	1897	12189	1947	12255	1997	12307
1848	12126	1898	12190	1948	12256	1998	12308
1849	12127	1899	12191	1949	12257	(1998)	
1850	12128	1900	12193	1950	12258		

■ U50-5

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1	10002	51	10053	101	10103	151	10153	201	10203	251	10256
2	10003	52	10054	102	10104	152	10154	202	10204	252	10257
3	10004	53	10055	103	10105	153	10155	203	10205	253	10258
4	10005	54	10056	104	10106	154	10156	204	10206	254	10259
5	10006	55	10057	105	10107	155	10157	205	10207	255	10260
6	10007	56	10058	106	10108	156	10158	206	10208	256	10261
7	10008	57	10059	107	10109	157	10159	207	10209	257	10262
8	10009	58	10060	108	10110	158	10160	208	10210	258	10263
9	10011	59	10061	109	10111	159	10161	209	10211	259	10264
10	10012	60	10062	110	10112	160	10162	210	10212	260	10265
11	10013	61	10063	111	10113	161	10163	211	10213	261	10266
12	10014	62	10064	112	10114	162	10164	212	10215	262	10267
13	10015	63	10065	113	10115	163	10165	213	10217	263	10268
14	10016	64	10066	114	10116	164	10166	214	10218	264	10269
15	10017	65	10067	115	10117	165	10167	215	10219	265	10270
16	10018	66	10068	116	10118	166	10168	216	10220	266	10271
17	10019	67	10069	117	10119	167	10169	217	10221	267	10272
18	10020	68	10070	118	10120	168	10170	218	10222	268	10274
19	10021	69	10071	119	10121	169	10171	219	10223	269	10275
20	10022	70	10072	120	10122	170	10172	220	10224	270	10276
21	10023	71	10073	121	10123	171	10173	221	10225	271	10277
22	10024	72	10074	122	10124	172	10174	222	10226	272	10278
23	10025	73	10075	123	10125	173	10175	223	10227	273	10279
24	10026	74	10076	124	10126	174	10176	224	10228	274	10280
25	10027	75	10077	125	10127	175	10177	225	10229	275	10281
26	10028	76	10078	126	10128	176	10178	226	10230	276	10282
27	10029	77	10079	127	10129	177	10179	227	10231	277	10283
28	10030	78	10080	128	10130	178	10180	228	10232	278	10284
29	10031	79	10081	129	10131	179	10181	229	10233	279	10285
30	10032	80	10082	130	10132	180	10182	230	10234	280	10286
31	10033	81	10083	131	10133	181	10183	231	10235	281	10287
32	10034	82	10084	132	10134	182	10184	232	10236	282	10288
33	10035	83	10085	133	10135	183	10185	233	10237	283	10289
34	10036	84	10086	134	10136	184	10186	234	10239	284	10290
35	10037	85	10087	135	10137	185	10187	235	10240	285	10291
36	10038	86	10088	136	10138	186	10188	236	10241	286	10292
37	10039	87	10089	137	10139	187	10189	237	10242	287	10293
38	10040	88	10090	138	10140	188	10190	238	10243	288	10295
39	10041	89	10091	139	10141	189	10191	239	10244	289	10296
40	10042	90	10092	140	10142	190	10192	240	10245	290	10297
41	10043	91	10093	141	10143	191	10193	241	10246	291	10298
42	10044	92	10094	142	10144	192	10194	242	10247	292	10299
43	10045	93	10095	143	10145	193	10195	243	10248	293	10300
44	10046	94	10096	144	10146	194	10196	244	10249	294	10301
45	10047	95	10097	145	10147	195	10197	245	10250	295	10302
46	10048	96	10098	146	10148	196	10198	246	10251	296	10303
47	10049	97	10099	147	10149	197	10199	247	10252	297	10304
48	10050	98	10100	148	10150	198	10200	248	10253	298	10305
49	10051	99	10101	149	10151	199	10201	249	10254	299	10306
50	10052	100	10102	150	10152	200	10202	250	10255	300	10307

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
301	10308	351	10362	401	10414	451	10467	501	10518	551	10571
302	10309	352	10363	402	10415	452	10468	502	10519	552	10572
303	10310	353	10364	403	10416	453	10469	503	10521	553	10573
304	10311	354	10365	404	10417	454	10470	504	10523	554	10574
305	10312	355	10367	405	10418	455	10471	505	10524	555	10575
306	10313	356	10368	406	10419	456	10472	506	10525	556	10576
307	10314	357	10369	407	10420	457	10473	507	10526	557	10577
308	10316	358	10370	408	10421	458	10474	508	10527	558	10578
309	10317	359	10371	409	10422	459	10475	509	10528	559	10579
310	10318	360	10372	410	10423	460	10476	510	10529	560	10580
311	10319	361	10373	411	10424	461	10477	511	10530	561	10581
312	10320	362	10374	412	10425	462	10479	512	10531	562	10582
313	10321	363	10375	413	10426	463	10480	513	10532	563	10583
314	10322	364	10376	414	10427	464	10481	514	10533	564	10584
315	10323	365	10377	415	10428	465	10482	515	10534	565	10585
316	10324	366	10378	416	10429	466	10483	516	10535	566	10586
317	10326	367	10379	417	10430	467	10484	517	10536	567	10587
318	10327	368	10380	418	10431	468	10485	518	10537	568	10588
319	10328	369	10381	419	10432	469	10486	519	10538	569	10589
320	10329	370	10382	420	10433	470	10487	520	10539	570	10590
321	10330	371	10383	421	10435	471	10488	521	10540	571	10591
322	10331	372	10384	422	10436	472	10489	522	10541	572	10592
323	10332	373	10385	423	10437	473	10490	523	10542	573	10593
324	10333	374	10386	424	10438	474	10491	524	10543	574	10594
325	10334	375	10388	425	10439	475	10492	525	10545	575	10595
326	10335	376	10389	426	10440	476	10493	526	10546	576	10596
327	10336	377	10390	427	10442	477	10494	527	10547	577	10597
328	10337	378	10391	428	10443	478	10495	528	10548	578	10598
329	10338	379	10392	429	10444	479	10496	529	10549	579	10599
330	10339	380	10393	430	10445	480	10497	530	10550	580	10600
331	10340	381	10394	431	10446	481	10498	531	10551	581	10601
332	10341	382	10395	432	10447	482	10499	532	10552	582	10602
333	10342	383	10396	433	10448	483	10500	533	10553	583	10603
334	10343	384	10397	434	10449	484	10501	534	10554	584	10604
335	10344	385	10398	435	10450	485	10502	535	10555	585	10605
336	10345	386	10399	436	10451	486	10503	536	10556	586	10606
337	10346	387	10400	437	10452	487	10504	537	10557	587	10607
338	10347	388	10401	438	10453	488	10505	538	10558	588	10608
339	10348	389	10402	439	10454	489	10506	539	10559	589	10609
340	10349	390	10403	440	10455	490	10507	540	10560	590	10610
341	10350	391	10404	441	10456	491	10508	541	10561	591	10611
342	10351	392	10405	442	10457	492	10509	542	10562	592	10612
343	10352	393	10406	443	10458	493	10510	543	10563	593	10613
344	10354	394	10407	444	10459	494	10511	544	10564	594	10614
345	10356	395	10408	445	10460	495	10512	545	10565	595	10615
346	10357	396	10409	446	10461	496	10513	546	10566	596	10616
347	10358	397	10410	447	10462	497	10514	547	10567	597	10617
348	10359	398	10411	448	10463	498	10515	548	10568	598	10618
349	10360	399	10412	449	10464	499	10516	549	10569	599	10619
350	10361	400	10413	450	10466	500	10517	550	10570	600	10620

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
601	10621	651	10672	701	10722	751	10772	801	10829	851	10884
602	10622	652	10673	702	10723	752	10773	802	10830	852	10885
603	10623	653	10674	703	10724	753	10774	803	10831	853	10886
604	10624	654	10675	704	10725	754	10775	804	10832	854	10887
605	10625	655	10676	705	10726	755	10776	805	10833	855	10888
606	10626	656	10677	706	10727	756	10777	806	10834	856	10890
607	10627	657	10678	707	10728	757	10778	807	10835	857	10891
608	10628	658	10679	708	10729	758	10779	808	10836	858	10892
609	10629	659	10680	709	10730	759	10780	809	10837	859	10893
610	10630	660	10681	710	10731	760	10781	810	10838	860	10894
611	10631	661	10682	711	10732	761	10783	811	10839	861	10895
612	10632	662	10683	712	10733	762	10784	812	10840	862	10896
613	10633	663	10684	713	10734	763	10785	813	10841	863	10898
614	10634	664	10685	714	10735	764	10786	814	10842	864	10900
615	10636	665	10686	715	10736	765	10787	815	10843	865	10901
616	10637	666	10687	716	10737	766	10788	816	10844	866	10903
617	10638	667	10688	717	10738	767	10789	817	10845	867	10904
618	10639	668	10689	718	10739	768	10790	818	10846	868	10905
619	10640	669	10690	719	10740	769	10791	819	10847	869	10906
620	10641	670	10691	720	10741	770	10792	820	10848	870	10908
621	10642	671	10692	721	10742	771	10793	821	10849	871	10910
622	10643	672	10693	722	10743	772	10794	822	10850	872	10911
623	10644	673	10694	723	10744	773	10796	823	10851	873	10912
624	10645	674	10695	724	10745	774	10797	824	10852	874	10913
625	10646	675	10696	725	10746	775	10798	825	10853	875	10917
626	10647	676	10697	726	10747	776	10799	826	10854	876	10918
627	10648	677	10698	727	10748	777	10800	827	10855	877	10919
628	10649	678	10699	728	10749	778	10801	828	10856	878	10920
629	10650	679	10700	729	10750	779	10803	829	10857	879	10921
630	10651	680	10701	730	10751	780	10806	830	10858	880	10922
631	10652	681	10702	731	10752	781	10807	831	10859	881	10923
632	10653	682	10703	732	10753	782	10808	832	10860	882	10924
633	10654	683	10704	733	10754	783	10809	833	10861	883	10925
634	10655	684	10705	734	10755	784	10810	834	10862	884	10926
635	10656	685	10706	735	10756	785	10811	835	10863	885	10927
636	10657	686	10707	736	10757	786	10813	836	10864	886	10929
637	10658	687	10708	737	10758	787	10814	837	10865	887	10930
638	10659	688	10709	738	10759	788	10815	838	10867	888	10931
639	10660	689	10710	739	10760	789	10816	839	10868	889	10932
640	10661	690	10711	740	10761	790	10817	840	10869	890	10933
641	10662	691	10712	741	10762	791	10818	841	10870	891	10934
642	10663	692	10713	742	10763	792	10820	842	10872	892	10935
643	10664	693	10714	743	10764	793	10821	843	10875	893	10936
644	10665	694	10715	744	10765	794	10822	844	10876	894	10937
645	10666	695	10716	745	10766	795	10823	845	10877	895	10938
646	10667	696	10717	746	10767	796	10824	846	10878	896	10939
647	10668	697	10718	747	10768	797	10825	847	10879	897	10941
648	10669	698	10719	748	10769	798	10826	848	10880	898	10943
649	10670	699	10720	749	10770	799	10827	849	10882	899	10944
650	10671	700	10721	750	10771	800	10828	850	10883	900	10945

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
901	10946	951	11003	1001	11057	1051	11113	1101	11171	1151	11231
902	10947	952	11005	1002	11058	1052	11115	1102	11172	1152	11233
903	10948	953	11006	1003	11059	1053	11116	1103	11173	1153	11234
904	10949	954	11007	1004	11061	1054	11117	1104	11175	1154	11235
905	10950	955	11008	1005	11062	1055	11118	1105	11176	1155	11236
906	10951	956	11009	1006	11063	1056	11119	1106	11177	1156	11237
907	10952	957	11010	1007	11065	1057	11120	1107	11178	1157	11238
908	10953	958	11011	1008	11067	1058	11121	1108	11179	1158	11240
909	10955	959	11012	1009	11068	1059	11122	1109	11180	1159	11241
910	10956	960	11013	1010	11069	1060	11123	1110	11181	1160	11243
911	10957	961	11014	1011	11070	1061	11124	1111	11182	1161	11244
912	10958	962	11015	1012	11072	1062	11126	1112	11184	1162	11245
913	10959	963	11016	1013	11074	1063	11129	1113	11185	1163	11246
914	10961	964	11017	1014	11075	1064	11130	1114	11186	1164	11247
915	10963	965	11018	1015	11076	1065	11131	1115	11187	1165	11248
916	10964	966	11019	1016	11077	1066	11132	1116	11188	1166	11249
917	10965	967	11020	1017	11078	1067	11133	1117	11189	1167	11250
918	10966	968	11021	1018	11079	1068	11134	1118	11190	1168	11251
919	10967	969	11022	1019	11080	1069	11135	1119	11191	1169	11252
920	10968	970	11024	1020	11081	1070	11136	1120	11192	1170	11253
921	10970	971	11025	1021	11082	1071	11137	1121	11193	1171	11254
922	10971	972	11026	1022	11083	1072	11138	1122	11194	1172	11255
923	10972	973	11027	1023	11085	1073	11139	1123	11195	1173	11256
924	10974	974	11028	1024	11086	1074	11140	1124	11196	1174	11257
925	10975	975	11029	1025	11087	1075	11141	1125	11197	1175	11258
926	10976	976	11030	1026	11088	1076	11142	1126	11198	1176	11259
927	10977	977	11031	1027	11089	1077	11145	1127	11199	1177	11260
928	10978	978	11032	1028	11090	1078	11146	1128	11200	1178	11265
929	10979	979	11033	1029	11091	1079	11147	1129	11201	1179	11266
930	10981	980	11034	1030	11092	1080	11148	1130	11202	1180	11267
931	10982	981	11035	1031	11093	1081	11150	1131	11204	1181	11268
932	10983	982	11036	1032	11094	1082	11151	1132	11205	1182	11269
933	10984	983	11037	1033	11095	1083	11152	1133	11206	1183	11270
934	10985	984	11038	1034	11096	1084	11153	1134	11207	1184	11271
935	10986	985	11039	1035	11097	1085	11154	1135	11209	1185	11272
936	10987	986	11040	1036	11098	1086	11155	1136	11210	1186	11273
937	10988	987	11042	1037	11099	1087	11156	1137	11213	1187	11274
938	10989	988	11043	1038	11100	1088	11157	1138	11214	1188	11275
939	10990	989	11044	1039	11101	1089	11158	1139	11216	1189	11276
940	10991	990	11045	1040	11102	1090	11159	1140	11218	1190	11277
941	10992	991	11046	1041	11103	1091	11160	1141	11220	1191	11278
942	10994	992	11047	1042	11104	1092	11161	1142	11222	1192	11279
943	10995	993	11049	1043	11105	1093	11162	1143	11223	1193	11280
944	10996	994	11050	1044	11106	1094	11163	1144	11224	1194	11281
945	10997	995	11051	1045	11107	1095	11165	1145	11225	1195	11282
946	10998	996	11052	1046	11108	1096	11166	1146	11226	1196	11284
947	10999	997	11053	1047	11109	1097	11167	1147	11227	1197	11285
948	11000	998	11054	1048	11110	1098	11168	1148	11228	1198	11286
949	11001	999	11055	1049	11111	1099	11169	1149	11229	1199	11287
950	11002	1000	11056	1050	11112	1100	11170	1150	11230	1200	11288

No.	Serial no.	No.	Serial no.	No.	Serial no.	No.	Serial no.
1201	11289	1251	11343	1301	11399	1351	11450
1202	11291	1252	11344	1302	11400	1352	11451
1203	11292	1253	11345	1303	11401	1353	11452
1204	11294	1254	11346	1304	11402	1354	11453
1205	11295	1255	11347	1305	11403	1355	11454
1206	11296	1256	11348	1306	11404	1356	11455
1207	11297	1257	11349	1307	11405	1357	11456
1208	11298	1258	11350	1308	11406	1358	11457
1209	11299	1259	11352	1309	11407	1359	11458
1210	11300	1260	11353	1310	11408	1360	11459
1211	11301	1261	11354	1311	11409	1361	11460
1212	11302	1262	11356	1312	11410	1362	11461
1213	11303	1263	11357	1313	11411	1363	11462
1214	11304	1264	11358	1314	11412	1364	11463
1215	11305	1265	11359	1315	11413	1365	11464
1216	11306	1266	11360	1316	11414	1366	11465
1217	11307	1267	11361	1317	11415	1367	11466
1218	11308	1268	11362	1318	11416	1368	11467
1219	11309	1269	11363	1319	11417	1369	11468
1220	11310	1270	11364	1320	11418	1370	11469
1221	11311	1271	11365	1321	11419	1371	11470
1222	11312	1272	11366	1322	11420	1372	11471
1223	11313	1273	11367	1323	11421	1373	11472
1224	11314	1274	11368	1324	11422	1374	11473
1225	11315	1275	11370	1325	11423	1375	11474
1226	11316	1276	11371	1326	11425	1376	11475
1227	11317	1277	11372	1327	11426	1377	11476
1228	11318	1278	11374	1328	11427	1378	11477
1229	11319	1279	11375	1329	11428	1379	11478
1230	11321	1280	11376	1330	11429	1380	11479
1231	11322	1281	11378	1331	11430	1381	11480
1232	11323	1282	11379	1332	11431	(1381)	
1233	11324	1283	11380	1333	11432		
1234	11325	1284	11381	1334	11433		
1235	11326	1285	11382	1335	11434		
1236	11327	1286	11383	1336	11435		
1237	11328	1287	11384	1337	11436		
1238	11329	1288	11385	1338	11437		
1239	11330	1289	11386	1339	11438		
1240	11331	1290	11387	1340	11439		
1241	11332	1291	11388	1341	11440		
1242	11333	1292	11389	1342	11441		
1243	11334	1293	11390	1343	11442		
1244	11336	1294	11391	1344	11443		
1245	11337	1295	11392	1345	11444		
1246	11338	1296	11393	1346	11445		
1247	11339	1297	11395	1347	11446		
1248	11340	1298	11396	1348	11447		
1249	11341	1299	11397	1349	11448		
1250	11342	1300	11398	1350	11449		