

Argenteuil, 3/01/21

SERVICE – BULLETIN

Reference-N°: KE-RT-2105 – v3.1

RT270-2 RT280-2 / Kick Down Switch Removal

Affected distributors:

- ☒ KBD
- ☒ KE
- ☐ KUK

Classification:

- ☐ 1. Information
- ☐ 2. Fix on a failure basis
- ☐ 3. Recommended product improvement
- ☒ 4. Mandatory campaign

Model	Serial N°
RT270-2	RT270-2 => up to SN 270221023
RT280-2	RT280-2 => up to SN 280222013

A. Subject

This safety bulletin is concerning the kick-down switch on accelerator pedal.
There is a risk of stuck accelerator pedal caused by the kick down switch.

On rare cases, this can happen when you press the accelerator pedal to the maximum.
In this situation, the pedal will pass the kick down switch and can get stuck.


This of course creates dangerous situations that we want to avoid.

Please therefore carry out the instruction below on all machines that are equipped with this pedal PN W21CKT5077 (Supplier PN 3106382A).

Machines RT270-2 up to SN 270221023, and RT280-2 up to SN 280222013 are all concerned. The machines with SN upper and the current deliveries are without the kick down switch.

B. Correction procedure

1. Remove connector from accelerator pedal
2. Remove accelerator pedal from cabin/safety roof
3. Remove the kick-down switch as shown here below

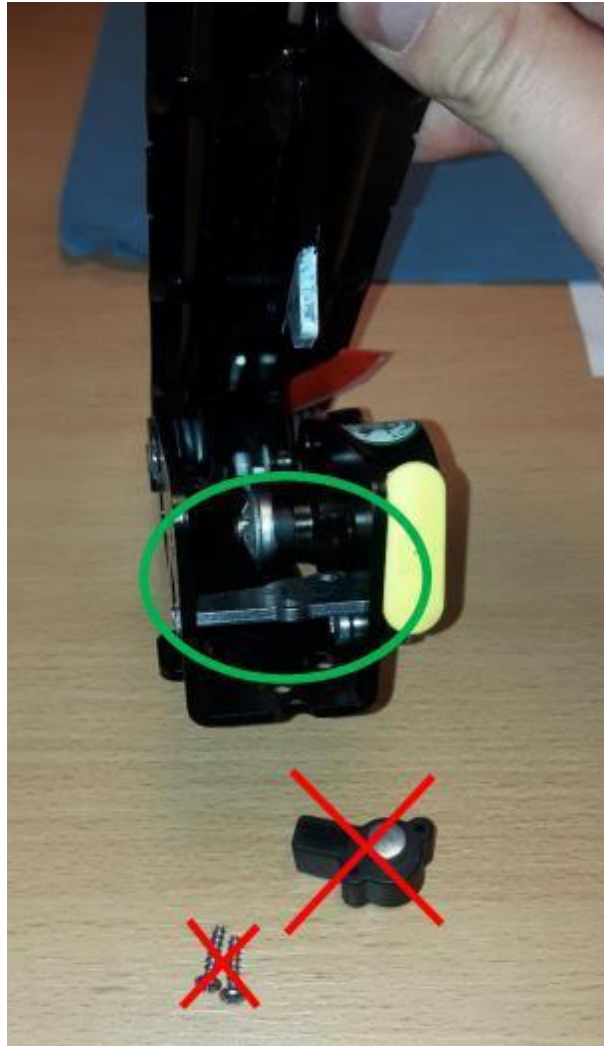

4. Mount the accelerator pedal back in reverse order
5. After the adjustment, it is recommended to recalibrate the accelerator pedal according to instruction job card attached in appendix on this bulletin.

C. Warranty information

1. Conditions:

- Part: Yes
- Labour: 0.5 hours
- Mileage: Yes
- Campaign allowance: Yes

2. Replaced parts

☐ Return ☐ Store ☒ Attach photos to claim, then scrap ☐ Scrap

Note: Warranty claims without pictures attached will be rejected

Ensure to mention this bulletin's reference number on the related warranty claim.

D. Termination date:

This campaign must be completed as soon as possible and with the highest priority.

This service bulletin expires on: **01.07.2022**

E. List of concerned machines:

Sales Company	Country	Machine Type	Serial No
KE	AT	RT270-2	270220002
KE	BE	RT280-2	280220003
KE	BE	RT280-2	280220012
KE	BE	RT280-2	280220023
KE	BE	RT280-2	280220034
KE	BE	RT280-2	280220041
KE	BE	RT280-2	280220046
KE	BE	RT280-2	280221001
KE	BE	RT280-2	280221002
KE	BE	RT280-2	280221011
KE	BE	RT280-2	280221014
KE	BE	RT280-2	280221016
KE	BE	RT280-2	280221094
KE	BE	RT280-2	280221125
KE	BE	RT280-2	280221132
KE	BE	RT280-2	280221137
KE	BE	RT280-2	280221144
KE	CH	RT280-2	280221005




Sales Company	Country	Machine Type	Serial No
KE	CH	RT280-2	280221064
KE	DK	RT270-2	270220004
KE	DK	RT270-2	270220006
KE	DK	RT270-2	270221004
KE	DK	RT270-2	270221005
KE	DK	RT270-2	270221006
KE	DK	RT270-2	270221007
KE	DK	RT270-2	270221008
KE	DK	RT270-2	270221015
KE	DK	RT270-2	270221018
KE	DK	RT270-2	270221022
KE	DK	RT280-2	280220024
KE	DK	RT280-2	280220030
KE	DK	RT280-2	280220043
KE	DK	RT280-2	280220044
KE	DK	RT280-2	280221013
KE	DK	RT280-2	280221015
KE	DK	RT280-2	280221017
KE	DK	RT280-2	280221019
KE	DK	RT280-2	280221022
KE	DK	RT280-2	280221024
KE	DK	RT280-2	280221027
KE	DK	RT280-2	280221028
KE	DK	RT280-2	280221031
KE	DK	RT280-2	280221032
KE	DK	RT280-2	280221034
KE	DK	RT280-2	280221036
KE	DK	RT280-2	280221037
KE	DK	RT280-2	280221038
KE	DK	RT280-2	280221039
KE	DK	RT280-2	280221040
KE	DK	RT280-2	280221042
KE	DK	RT280-2	280221044
KE	DK	RT280-2	280221045
KE	DK	RT280-2	280221046
KE	DK	RT280-2	280221047
KE	DK	RT280-2	280221048
KE	DK	RT280-2	280221050
KE	DK	RT280-2	280221051
KE	DK	RT280-2	280221052
KE	DK	RT280-2	280221054
KE	DK	RT280-2	280221055
KE	DK	RT280-2	280221056
KE	DK	RT280-2	280221057
KE	DK	RT280-2	280221059
KE	DK	RT280-2	280221060

Sales Company	Country	Machine Type	Serial No
KE	DK	RT280-2	280221061
KE	DK	RT280-2	280221062
KE	DK	RT280-2	280221066
KE	DK	RT280-2	280221067
KE	DK	RT280-2	280221071
KE	DK	RT280-2	280221075
KE	DK	RT280-2	280221077
KE	DK	RT280-2	280221079
KE	DK	RT280-2	280221085
KE	DK	RT280-2	280221086
KE	DK	RT280-2	280221091
KE	DK	RT280-2	280221096
KE	DK	RT280-2	280221097
KE	DK	RT280-2	280221098
KE	DK	RT280-2	280221100
KE	DK	RT280-2	280221102
KE	DK	RT280-2	280221103
KE	DK	RT280-2	280221105
KE	DK	RT280-2	280221108
KE	DK	RT280-2	280221111
KE	DK	RT280-2	280221112
KE	DK	RT280-2	280221114
KE	DK	RT280-2	280221118
KE	DK	RT280-2	280221120
KE	DK	RT280-2	280221126
KE	DK	RT280-2	280221127
KE	DK	RT280-2	280221135
KE	DK	RT280-2	280221136
KE	DK	RT280-2	280221138
KE	DK	RT280-2	280221140
KE	FI	RT270-2	270220005
KE	FI	RT270-2	270221001
KE	FI	RT270-2	270221002
KE	FI	RT270-2	270221009
KE	FI	RT270-2	270221010
KE	FI	RT280-2	280220013
KE	FR	RT270-2	270220001
KE	FR	RT270-2	270220003
KE	FR	RT270-2	270221012
KE	FR	RT270-2	270221016
KE	FR	RT280-2	280221073
KE	GF	RT270-2	270221020
KE	NL	RT270-2	270221011
KE	NL	RT270-2	270221013
KE	NL	RT280-2	280220042
KE	NL	RT280-2	280221072

Sales Company	Country	Machine Type	Serial No
KE	NL	RT280-2	280221074
KE	NL	RT280-2	280221082
KE	NL	RT280-2	280221141
KE	SE	RT280-2	280220011
KE	SE	RT280-2	280220014
KE	SE	RT280-2	280220016
KE	SE	RT280-2	280220018
KE	SE	RT280-2	280220019
KE	SE	RT280-2	280220020
KE	SE	RT280-2	280220021
KE	SE	RT280-2	280220022
KE	SE	RT280-2	280220025
KE	SE	RT280-2	280220031
KE	SE	RT280-2	280221018
KE	SE	RT280-2	280221020
KE	SE	RT280-2	280221023
KE	SE	RT280-2	280221025
KE	SE	RT280-2	280221026
KBD	DE	RT280-2	280220005
KBD	DE	RT280-2	280220009
KBD	DE	RT280-2	280221009
KBD	DE	RT280-2	280220002
KBD	DE	RT280-2	280220004
KBD	DE	RT280-2	280220006
KBD	DE	RT280-2	280220010
KBD	DE	RT280-2	280220007
KBD	DE	RT280-2	280220008
KBD	DE	RT280-2	280220015
KBD	DE	RT280-2	280220017
KBD	DE	RT280-2	280220028
KBD	DE	RT280-2	280220029
KBD	DE	RT280-2	280220027
KBD	DE	RT280-2	280220026
KBD	DE	RT280-2	280220036
KBD	DE	RT280-2	280220037
KBD	DE	RT280-2	280220039
KBD	DE	RT280-2	280220038
KBD	DE	RT280-2	280221003
KBD	DE	RT280-2	280220047
KBD	DE	RT280-2	280220045
KBD	DE	RT280-2	280221004
KBD	DE	RT280-2	280221008
KBD	DE	RT280-2	280221029
KBD	DE	RT280-2	280221030
KBD	DE	RT280-2	280221033
KBD	DE	RT280-2	280221063

Sales Company	Country	Machine Type	Serial No
KBD	DE	RT280-2	280221058
KBD	DE	RT280-2	280221053
KBD	DE	RT280-2	280221065
KBD	DE	RT280-2	280221049
KBD	DE	RT280-2	280221068
KBD	DE	RT280-2	280221041
KBD	DE	RT280-2	280221043
KBD	DE	RT280-2	280221070
KBD	DE	RT280-2	280221069
KBD	DE	RT280-2	280221076
KBD	DE	RT280-2	280221078
KBD	DE	RT280-2	280221081
KBD	DE	RT280-2	280221084
KBD	DE	RT280-2	280221087
KBD	DE	RT280-2	280221089
KBD	DE	RT280-2	280221090
KBD	DE	RT280-2	280221092
KBD	DE	RT280-2	280221093
KBD	DE	RT280-2	280221088
KBD	DE	RT280-2	280221110
KBD	DE	RT280-2	280221106
KBD	DE	RT280-2	280221107
KBD	DE	RT280-2	280221095
KBD	DE	RT280-2	280221099
KBD	DE	RT280-2	280221116
KBD	DE	RT280-2	280221117
KBD	DE	RT280-2	280221124
KBD	DE	RT280-2	280221129
KBD	DE	RT280-2	280221121
KBD	DE	RT280-2	280221119
KBD	DE	RT280-2	280221130

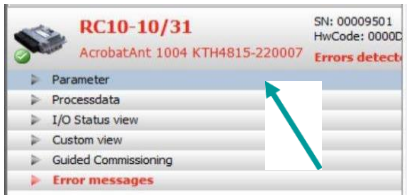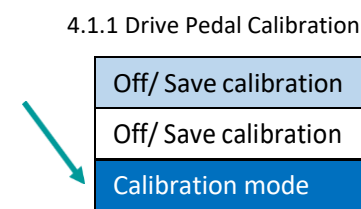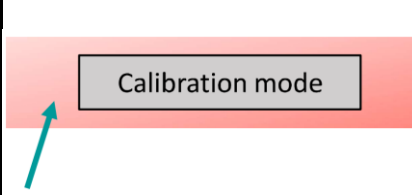

1	2	3	4	5
Connect BODAS Diag Tool to the machine	Select Parameters	Select 4. Calibration Then, 4.1 Pedals / Potentiometers	In 4.1.1 Drive Pedal Calibration, Select Calibration mode	After selection, the box is now in Red Color. Calibration Mode is, so, active
				
6	7	8	9	10
Successively and Slowly Press to max and release the accelerator pedal	A : Clic on Save B : Then confirm by clicking on OK	Select : Off/ Save calibration	A : Off/ Save calibration is still in Red Color B : Clic on Save C : Then confirm by clicking on OK	Calibration is finished.
